

 **KLAY-INSTRUMENTS**

KLAY INSTRUMENTS B.V.
Nijverheidsweg 5
7991 CZ Dwingeloo
www.klay.nl
info@klay.nl
tel. 0521-591550

DIGITAL PANEL METERS
programmable $\pm 10\ 000$ points

DIGINORM[®]



DGN 75

User Handbook
Valid for instruments with version 08.xx

SFERE - DGN 75 TA IN/55 v.08 - A 01/11 - Any data in this documentation may be modified without prior notice.

The friendly  interface
SFERE

■ Summary	
1 . INTRODUCTION	p2
2 . SPACE REQUIREMENTS	p3
3 . CONNECTINGS	p4
4 . PROGRAMMING	p5
4.1 Communication with the instrument	p5
4.2 Orientation through the programming	p5
4.3 Main menu	p5
4.4 Programming menu	p6
4.4.1 - Programming of the input	p6
<i>a / Process signals</i>	p6
<i>b / Temperature signals</i>	p7
<i>c / Resistive sensors</i>	p7
4.4.2 - Programming of the display	p8
4.5 Features of the inputs and programming limits	p11
4.5.1 - Current input	p11
4.5.2 - Voltage input	p11
4.5.3 - Temperature input	p11
4.5.4 - Resistance and potentiometer input	p12
4.5.5 - Logic inputs	p12
4.6 Features of the outputs and programming limits	p12
4.6.1 - Analog output	p12
4.6.2 - Digital output	p13
4.6.3 - Relay outputs	p13
4.6.4 - Safeties	p14
4.6.5 - Display features	p15
4.7 Reading of the configuration	p18
4.8 Access code	p18

■ Summary	
4.9 Programming of a new access code	p19
4.10 accessible functions from the main menu	p19
4.10.1 - Display simulation	p19
4.10.2 - Simulation of the analog output	p19
4.10.3 - Menu CLEAR:	
Deleting of the recorded alarms	p19
4.10.4 - Menu CLr.tA:	
Deleting of the programmed tare	p20
5 . FUNCTIONS WHICH CAN BE ACCESSED DIRECTLY FROM THE MEASURE DISPLAY	p20
5.1 Functions which require pressing only 1 key	p20
<i>a / Display of the min. value</i>	p20
<i>b / Display of the max. value</i>	p20
<i>c / Deleting of the min. and max. values</i>	p20
5.2 Functions which require pressing several keys	p21
5.2.1 - Process calibration	p21
5.2.2 - Visualisation of the direct measure	p21
5.2.3 - Visualisation and setting of the alarm setpoints	p22
5.2.4 - Setting of the tare (process input only)	p22
6 . ERROR MESSAGES	p22
7 . GENERAL WARRANTY TERMS	p22
8 . LEXIQUE	p22
9 . ANNEXE: MODBUS	p26
9.1 Table of the modbus addresses	p26
9.2 Correspondance with the DGN75U/DGN75M version 7.0	p27
9.3 Description of the born modbus functions	p28
9.4 Reading in double integer format	p28
9.5 CRC 16 calculation alorythm	p29

1. INTRODUCTION

The series **DGN 75-** offers a complete range of highly accurate programmable digital panel meters. Each instrument is equipped on front face with a five 14mm high red digits display whose brightness suits applications in industrial control rooms perfectly. They allow the display, the checking and transmission of data from any measurable magnitudes.

- **The DGN 75U (process inputs)** includes in standard:

A DC current or voltage input

Bidirectionnal $\pm 100\text{mV}$, $\pm 1\text{V}$, $\pm 10\text{V}$, $\pm 300\text{V}$, $\pm 20\text{mA}$.

- Accuracy: 0.1% of the full scale at $+25^\circ\text{C}$
Thermic drift $< 150 \text{ ppm}/^\circ\text{C}$
- Measurable scale overstepping from -10% to +10%
- Scale factor programmable
- Enlarging effect - Square root extraction
- Special linearisation on 20 points
- Supply for 2 or 3 wire sensor 24 V_{DC} ($\pm 15\%$) -25 mA protected from short circuits

- **The DGN 75T (temperature input)** includes as standard:

Either a thermocouple input:

(J, K, N, S, B, W5, T, R, E, W, W3, L)

- Accuracy: 0.1% of the full scale at $+25^\circ\text{C}$,
or $30\mu\text{V}$ typical ($60\mu\text{V}$ max.)
- Thermic drift $< 150\text{ppm}/^\circ\text{C}$
CJC efficiency: $< 0.03^\circ\text{C}/^\circ\text{C} \pm 0.5^\circ\text{C}$ from -5°C to $+55^\circ\text{C}$

Or a sensor input: Pt 100 Ω , Ni 100 Ω

- Line resistance influence in 3 wire measure within the class for $0 < \text{RI} < 25\Omega$
- Measurement of 2 wire Δ Pt100 from -200°C to $+270^\circ\text{C}$ ($0 < \text{RI} < 10\Omega$) (R max. 400Ω)
- Max. measure current: $250 \mu\text{A}$
- Accuracy: 0.1% of the full scale at $+25^\circ\text{C}$
- thermic drift $< 150\text{ppm}/^\circ\text{C}$.

- **The DGN 75M (Process, temperature, resistance and potentiometer inputs)**

(See the features of the DGN 75U and DGN 7T on the left hand column)

Resistive sensors: calibers 0-400 Ω and 0-2 k Ω (0-8 k Ω optional)

- Accuracy: 0.1% for the calibers 0-400 Ω and 0-8 k Ω and 0.5% for the caliber 0-2 k Ω (of the full scale at $+25^\circ\text{C}$)
- Thermic drift $< 150\text{ppm}/^\circ\text{C}$

Potentiometers: from 100 Ω to 10 k Ω

- Accuracy: 0.1% of the full scale at $+25^\circ\text{C}$
- Thermic drift $< 150\text{ppm}/^\circ\text{C}$

AVAILABLE OPTIONS: (to be specified on order)

Insulated analog output: A

Active or passive current, or voltage
Programmable scale ratio with enlarging effect.

Relay output: R or R4

2 or 4 relays: mode setpoint or mode window.
Latching function.
Time delay and hysteresis adjustable on each setpoint.
Alarm messages

Insulated digital output: N

RS 485 2 wire, protocole MODBUS-JBUS.

Logic input

2 insulated logic inputs with programmable functions
Display hold,
Moving of the decimal point,
Tare function,
zero reset of the min. and max.

Bargraph:

(16 leds display): B
Allows a quick evaluation of the measured value variations.
Programmable scale factor

General features

- Sampling time: 100 ms
- Input impedance $\geq 1 \text{ M}\Omega$ for the voltage inputs
Max. drop 0.9 V max. for the voltage input
- Common mode rejection rate: 130 dB
Serial mode rejection rate: 40 dB 50/60 Hz
- Zero drift compensation and self-calibration
- Insulation: input / power supply: 2.5 kV eff. 50Hz-1min
Input / output: 2.5 kV eff. 50Hz-1min
- **Universal power supply:**
20...270 VAC and 20 ...300 VDC 50/60/400 Hz
- **Power draw:** 4 W max. 7.5 VA max.
- **Conform** with the standards IEC 61000-6-4 on rejections and IEC 61000-6-2; on immunity (industrial environment)
IEC 61000-4-2 level 3, IEC 61000-4-3 level 3,
IEC 61000-4-4 level 4, IEC 61000-4-6 level 3.
CE marking according to the directive 2004/108/CE

Programming

- Via the keyboard
- With the configuration software MC VISION


To communicate with the series DGN75U/75M you will need a connection cable (M4 USB). To connect this cable to the DGN, insert the DIN contact into the especially foreseen female connector (on the instrument side). Then connect the USB cable to a PC. The software MC VISION allows reading the measures or modifications of the meter configuration.

Each configuration is kept as a file stored on disk. These files can then be consulted, modified, duplicated or loaded into the meters. The files can be created with or without having a meter connected. This software also allows the saving of existing configurations from the instruments which are already in service. All the files can be edited on any type of printer.

2. SPACE REQUIREMENTS


Dimensions of the case: (with terminals)

96 x 48 x 124 mm

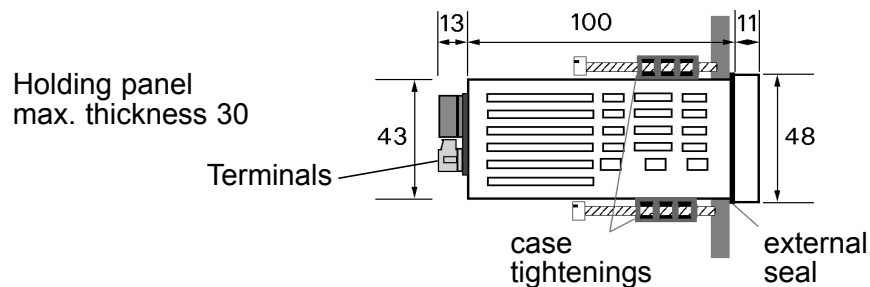

Panel mounting

cut out 44 x 91 mm

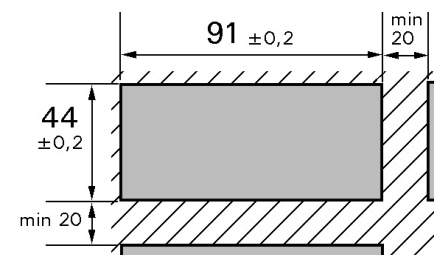

Protection:

Front face: IP 65
Housing: IP20
Terminals: IP 20

Housing:



Self-extinguishing case of
black UL 94 V0 ABS.

• **Connectors** plug-off connectors on
rear face for screwed connections
(2,5mm², flexible or rigid)


• **Display:** $\pm 10\ 000$ points (14 mm)
Electroluminescent red (green optional)
4 alarm leds
+ 4 leds with programmable functions
• *-10 000/+100 000 points (14 mm)
(optional)*
• *-2 000 / +10 000 points (20 mm)
(consult)*

3. CONNECTIONS

INPUTS

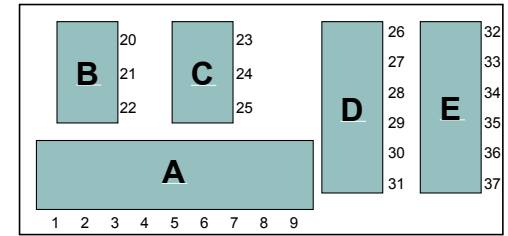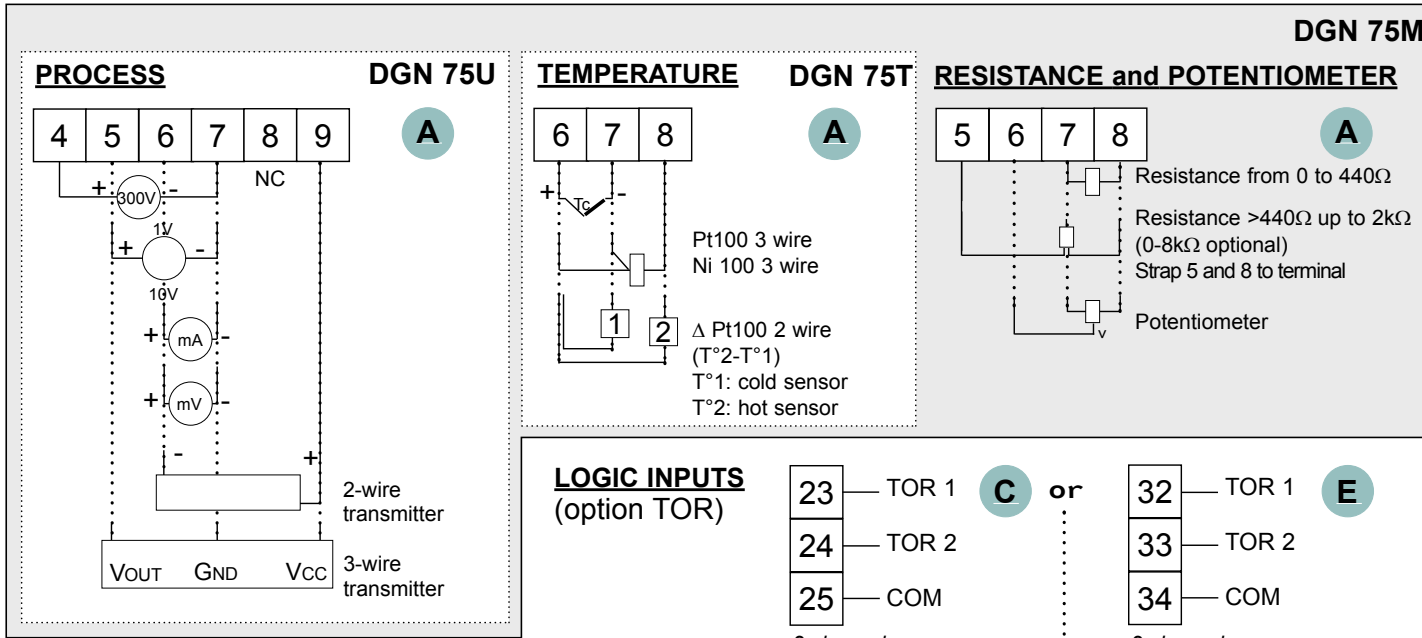


Location of the terminals
(view from case rear face)


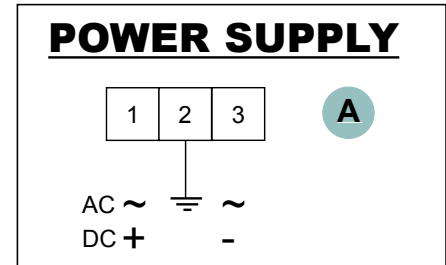


OUTPUTS (optional)


VOLTAGE PASSIVE CURRENT

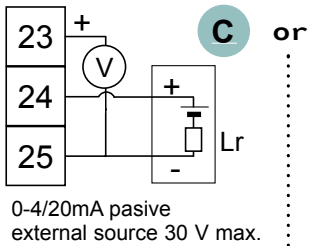

ACTIVE CURRENT

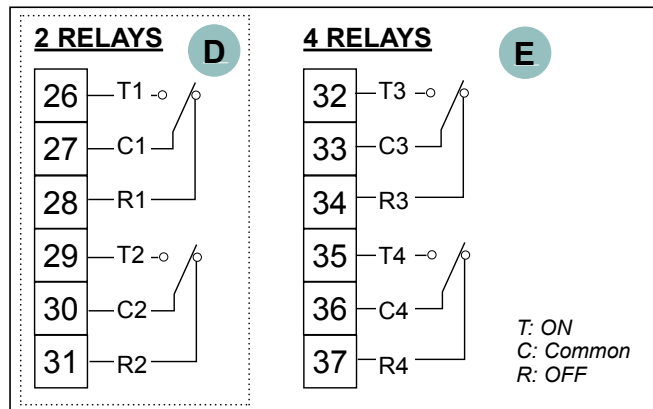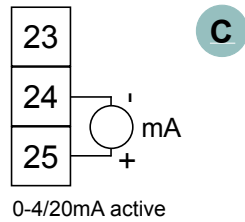

DIGITAL

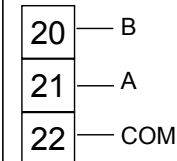


Data link RS 485

4. PROGRAMMING

4.1 Communication with the instrument

Several functions can be accessed directly on front face during the measure display:

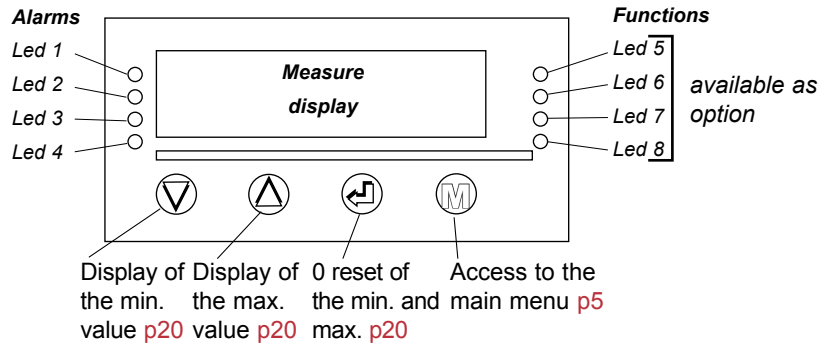

Other functions can be accessed by pressing several keys simultaneously:

- + Setting of the display down scale; (see p21)
- + Setting of the display full scale; (see p21)
- + Visualisation of the direct measure; (see p21)
- + Visualisation and setting of the alarm setpoints; (see p22)
- + Setting of the tare (except temperature inputs; (see p22)

Reading convention:


- Move through the main menu
- Revert to the previous menu
- Blinking display: awaiting validation or setting
- Alternating information display

Entering a parameter:

- First start by increasing or decreasing the 1st digit and the sign: from -9 to +9. and
- The 2nd from 0 to 9.
- The 3rd from 0 to 9. Between each entering, validate the cipher with
- The 4th from 0 to 9.


4.2 Orientation through the programming

The dialogue is ensured by 4 keys located on the front face.

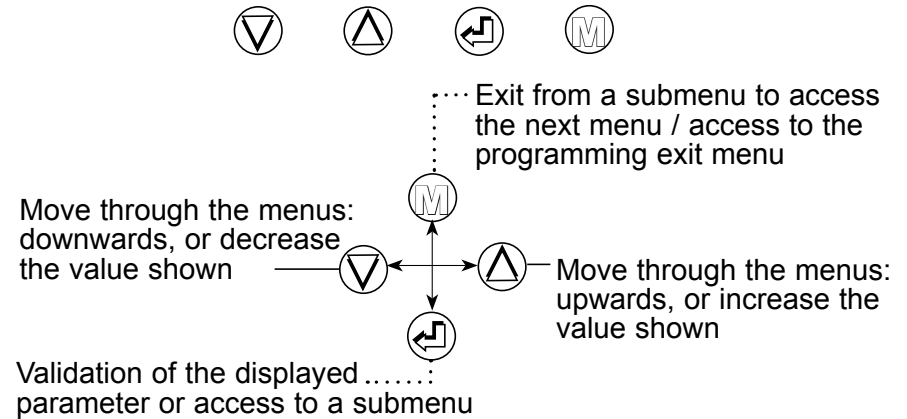

Note: In mode programming the instrument will automatically revert to the measure with the former configuration if no key is pressed during 1min.

4.3 Main menu

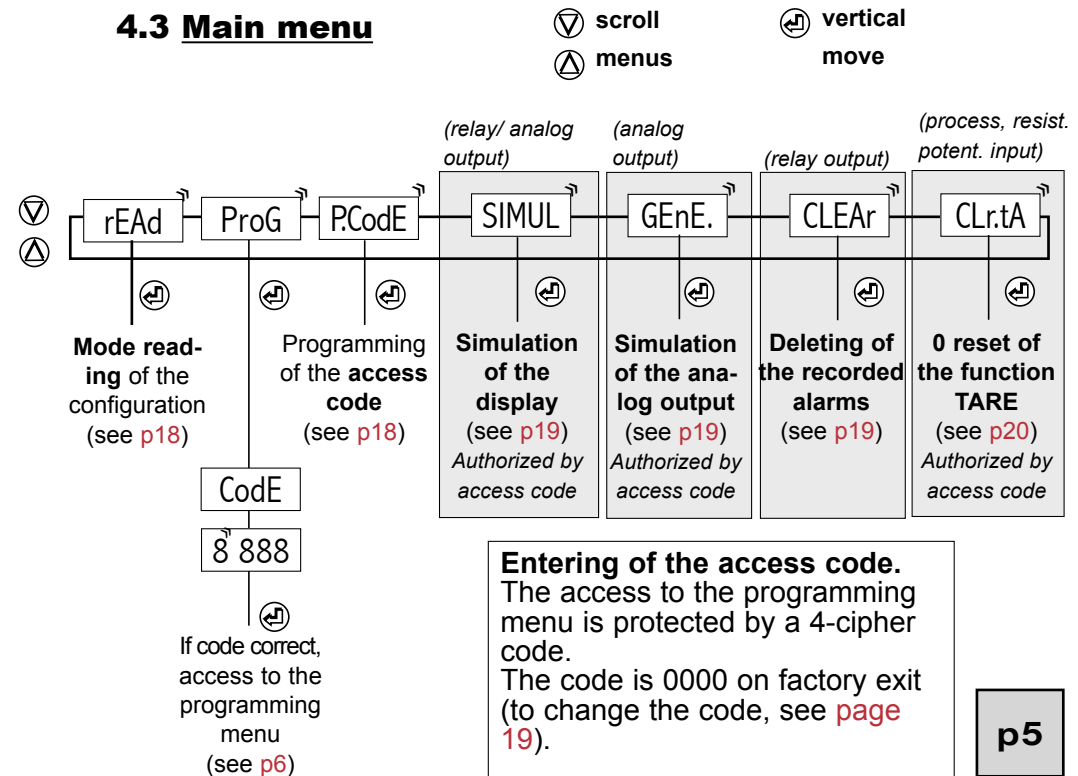

4.4 Programming menu *(according to options)*

⏏	⏏	InPut	Access to the programming of the input	p6
⏏	⏏	diSPL.	Access to the programming of the display factor	p8
⏏	⏏	AnA.	Access to the programming of the analog output <i>(option analog output)</i>	p8
⏏	⏏	JbuS	Access to the communication parameters <i>(option digital output)</i>	p9
⏏	⏏	tor	Access to the programming of the logic inputs <i>(option TOR)</i>	p9
⏏	⏏	rELAY	Access to the programming of the relays (2 or 4 relays) <i>(option relay output)</i>	p9
⏏	⏏	SECU	Access to the programming of the outputs, the, relays in case of self-diagnosis and/or sensor rupture, and access to disconnecting the sensor rupture <i>(option analog output or relays)</i>	p10
⏏	⏏	Pr.diS	Access to the programming of the display: Leds, Bargraph, display brightness	p10
⏏	⏏	Out.P	Access to the programming exit menu with or without saving the configuration	p11





Note:

⇒ Press  to go directly to the menu Out.P

⇒ In mode programming, the instrument will automatically revert to the measure with the former configuration if no key is pressed during 1min.


Note:

Press  to go on to the next menu  Move through the menus / choice


	Menu exit / access		Upwards move / increase
	Downwards move / decrease		Validation / vertical move

4.4.1 Programming of the input

a. Process signals

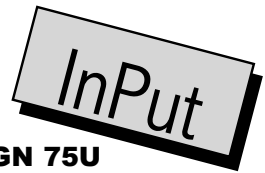

DGN 75U
DGN 75M

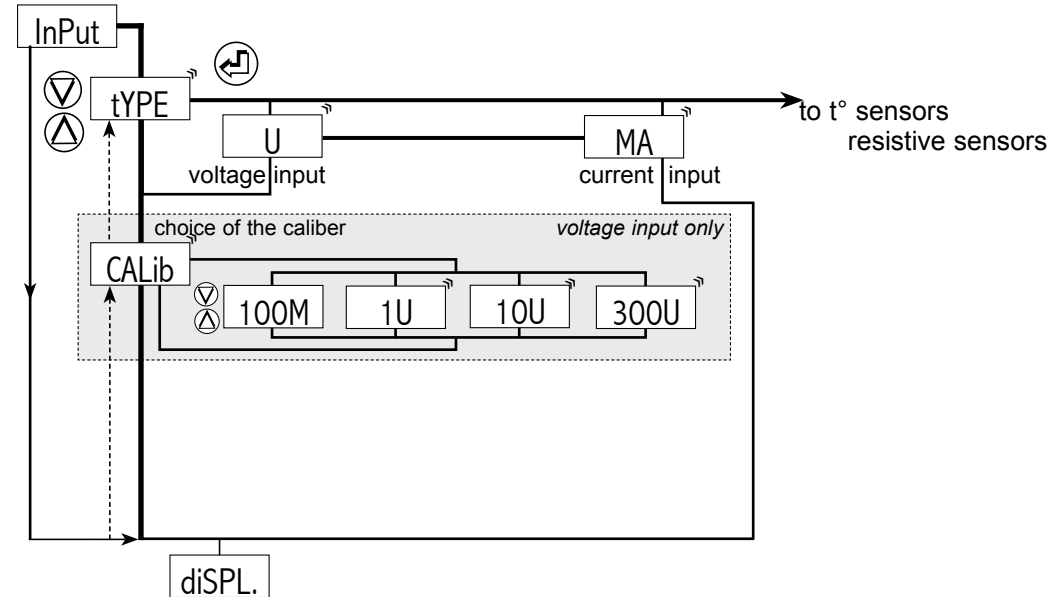


b. Temperature signals

InPut

**DGN 75T
DGN 75M**

process signals

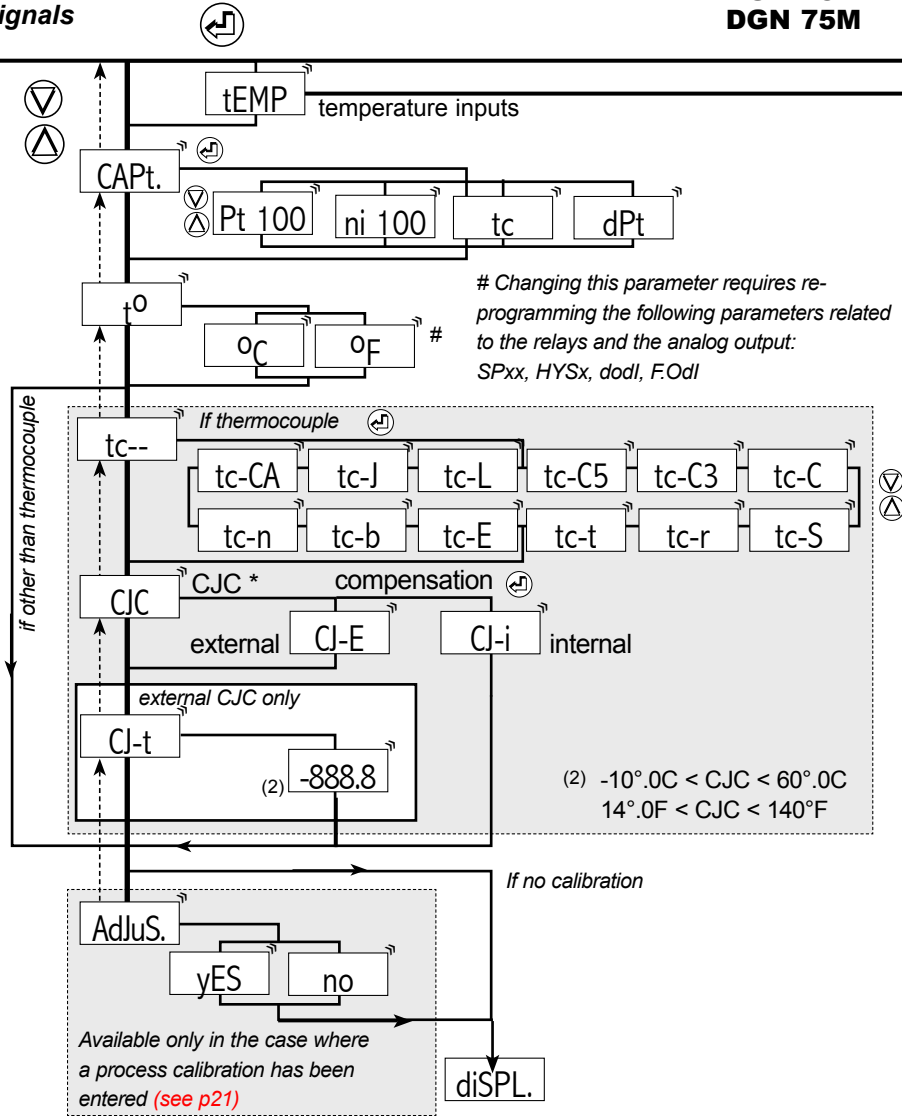


* cold junction compensation, except thermocouple B which is only in CJ-E.

c. Resistive sensors

InPut

DGN 75M

temperature signals
process signals

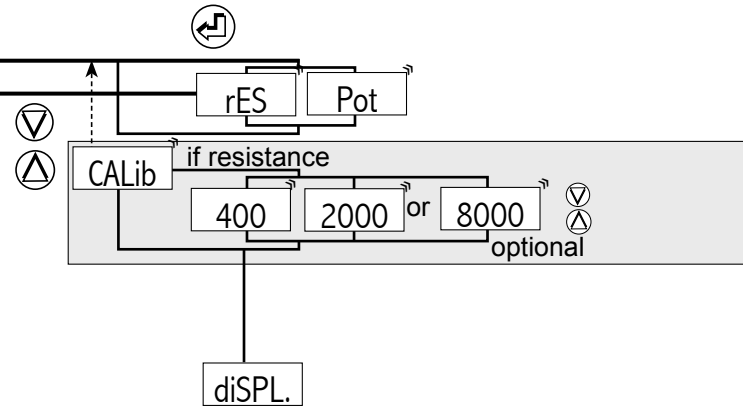

See also the features of the inputs **p11**

Note:

Press to go on to the next menu



Move through the menus / choice



Menu exit / access



Upwards move / increase




Downwards move / decrease




Validation / vertical move


4.4.2 Programming of the display

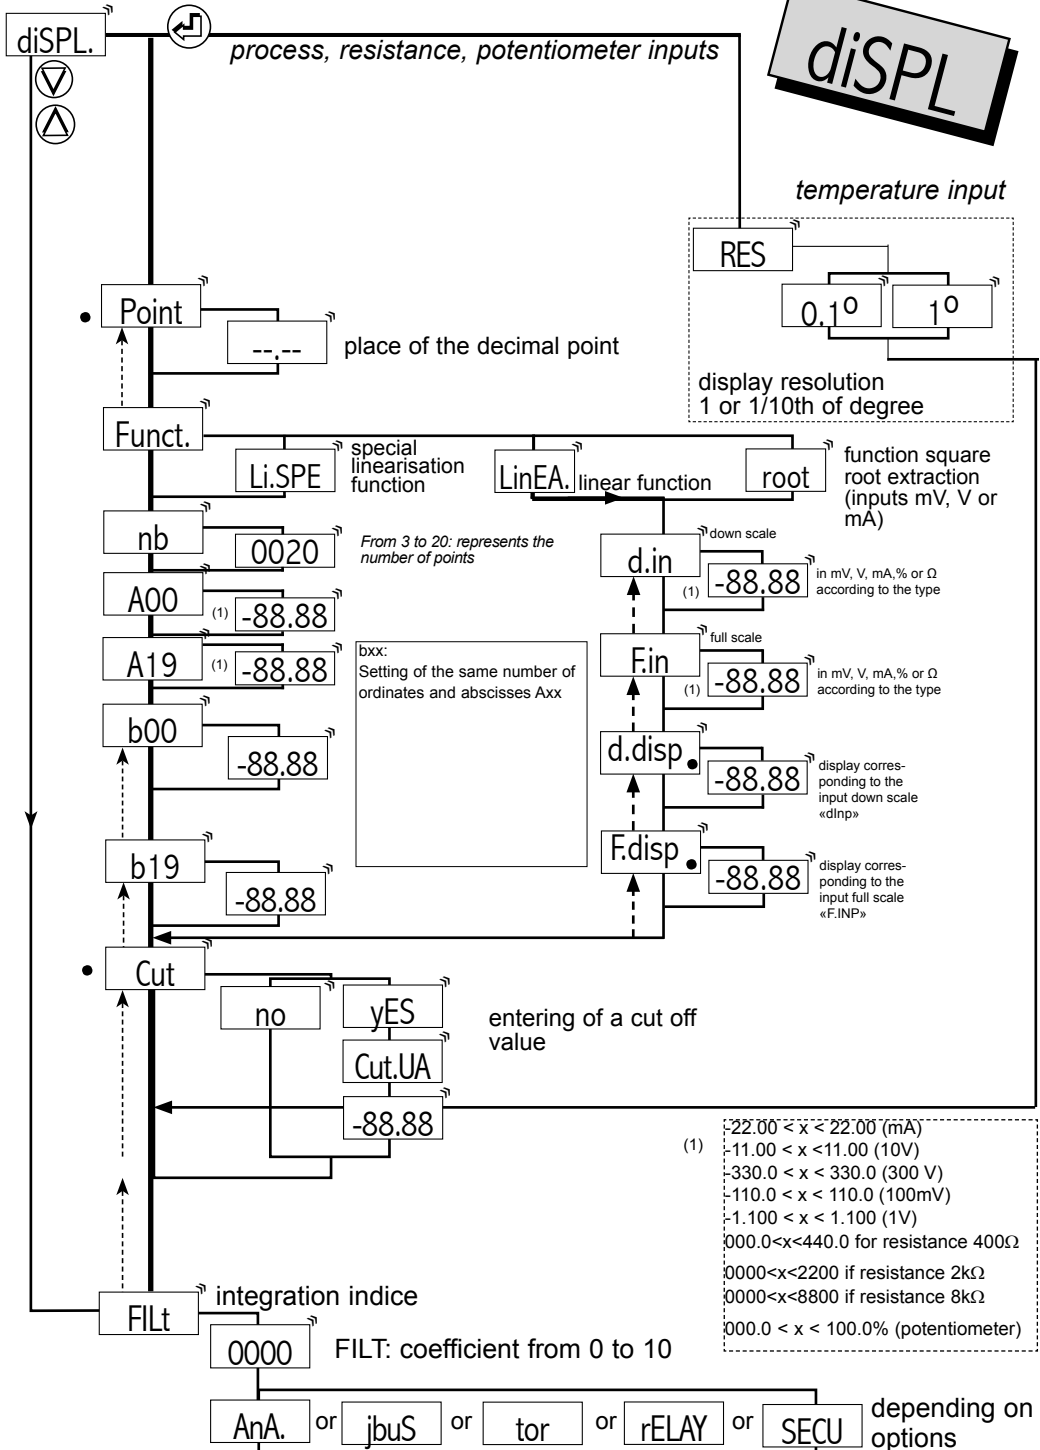


Option analog output

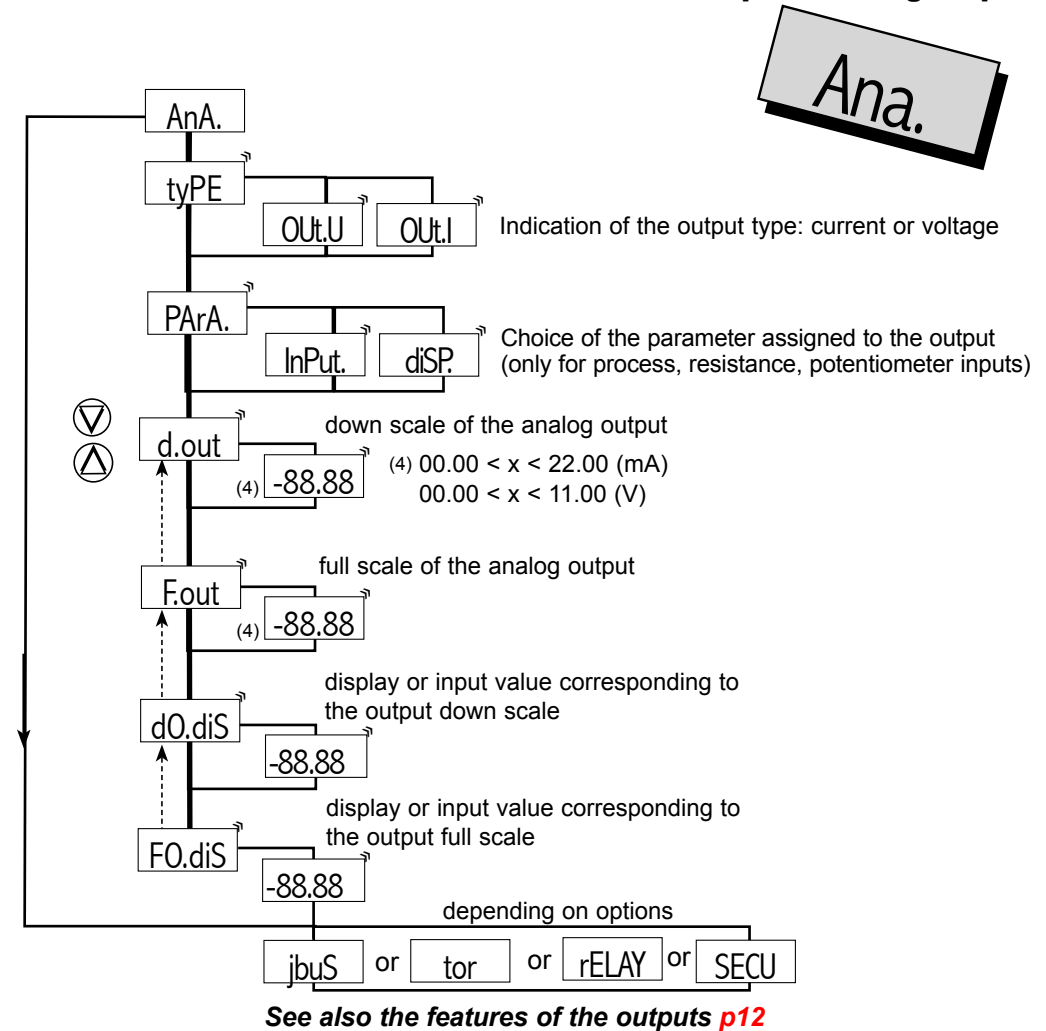

Communication parameters

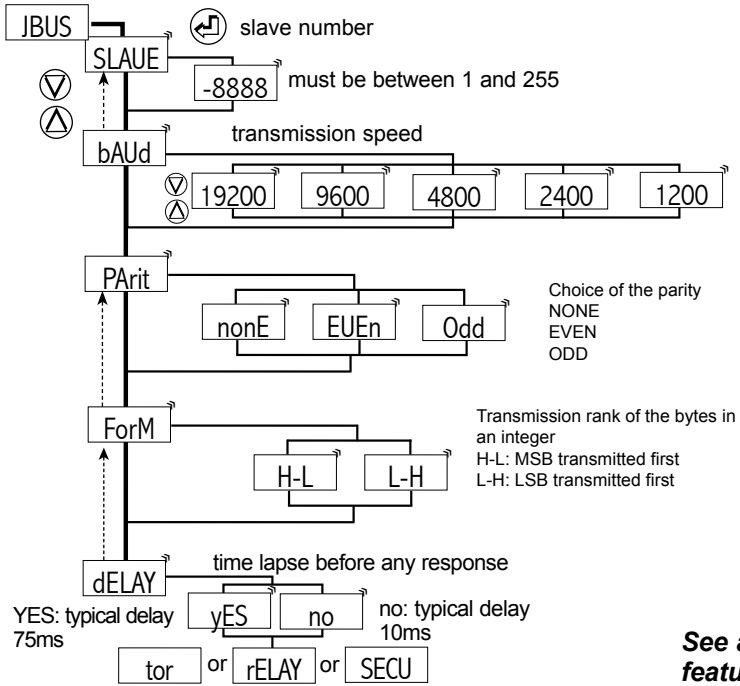


Option digital output

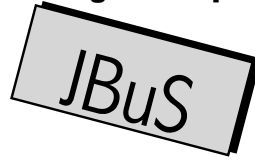

See also the digital data link features **p13**

Option logic inputs

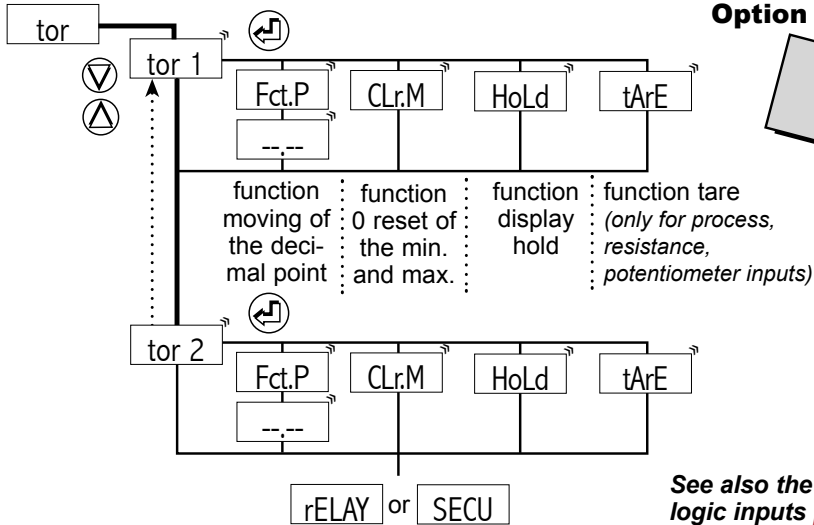


Note: Press **(M)** to go on to the next menu

(V) Move through the menus / choice

- (M)** Menu exit / access
- (V)** Upwards move / increase
- (V)** Downwards move / decrease
- (M)** Validation / vertical move


Option output 2 or 4 relays

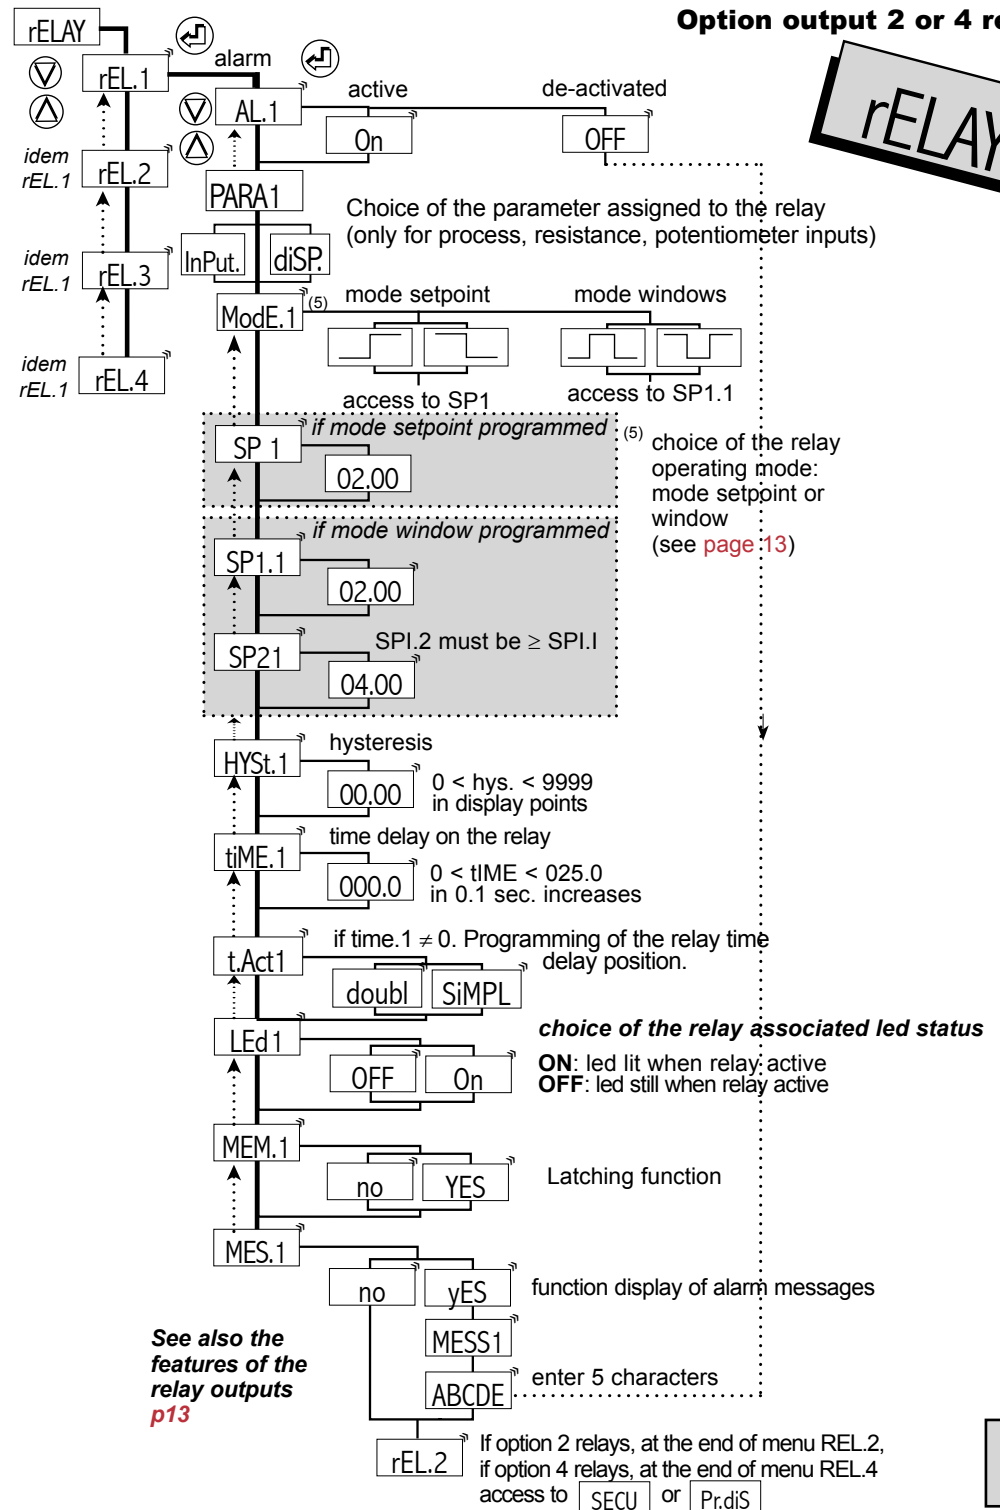


See also the features of the relay outputs **p13**

If input mV, temperature, resistance (caliber 400Ω) or mA (if dINP and F.INP > 3.5mA)

Safeties

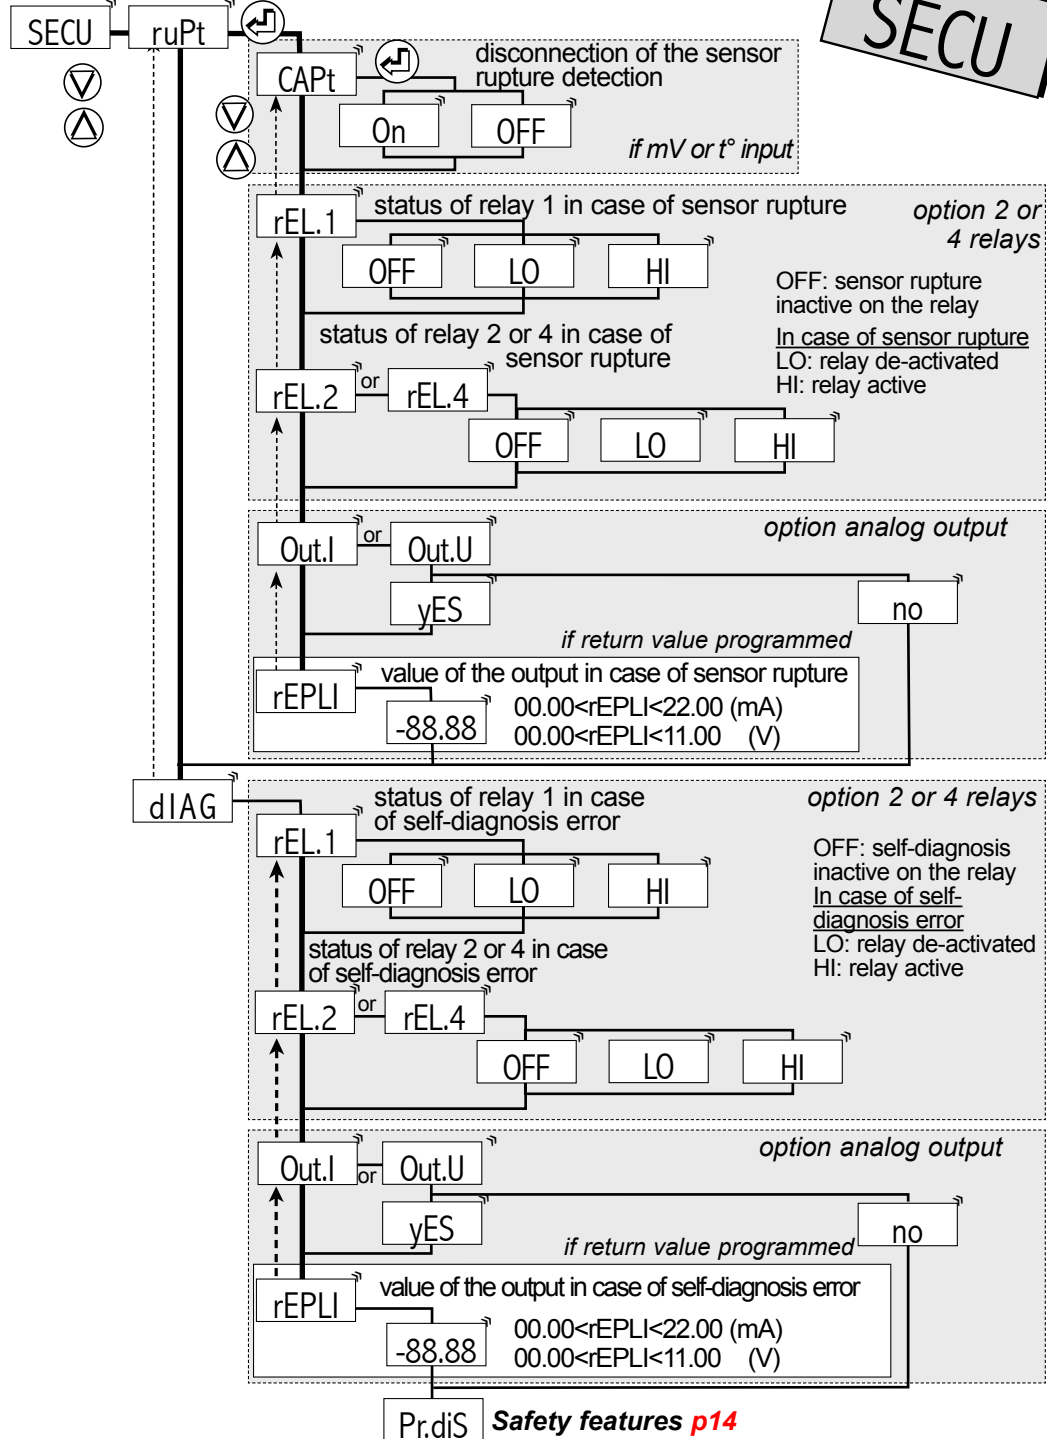

Pr.diS **Safety features p14**

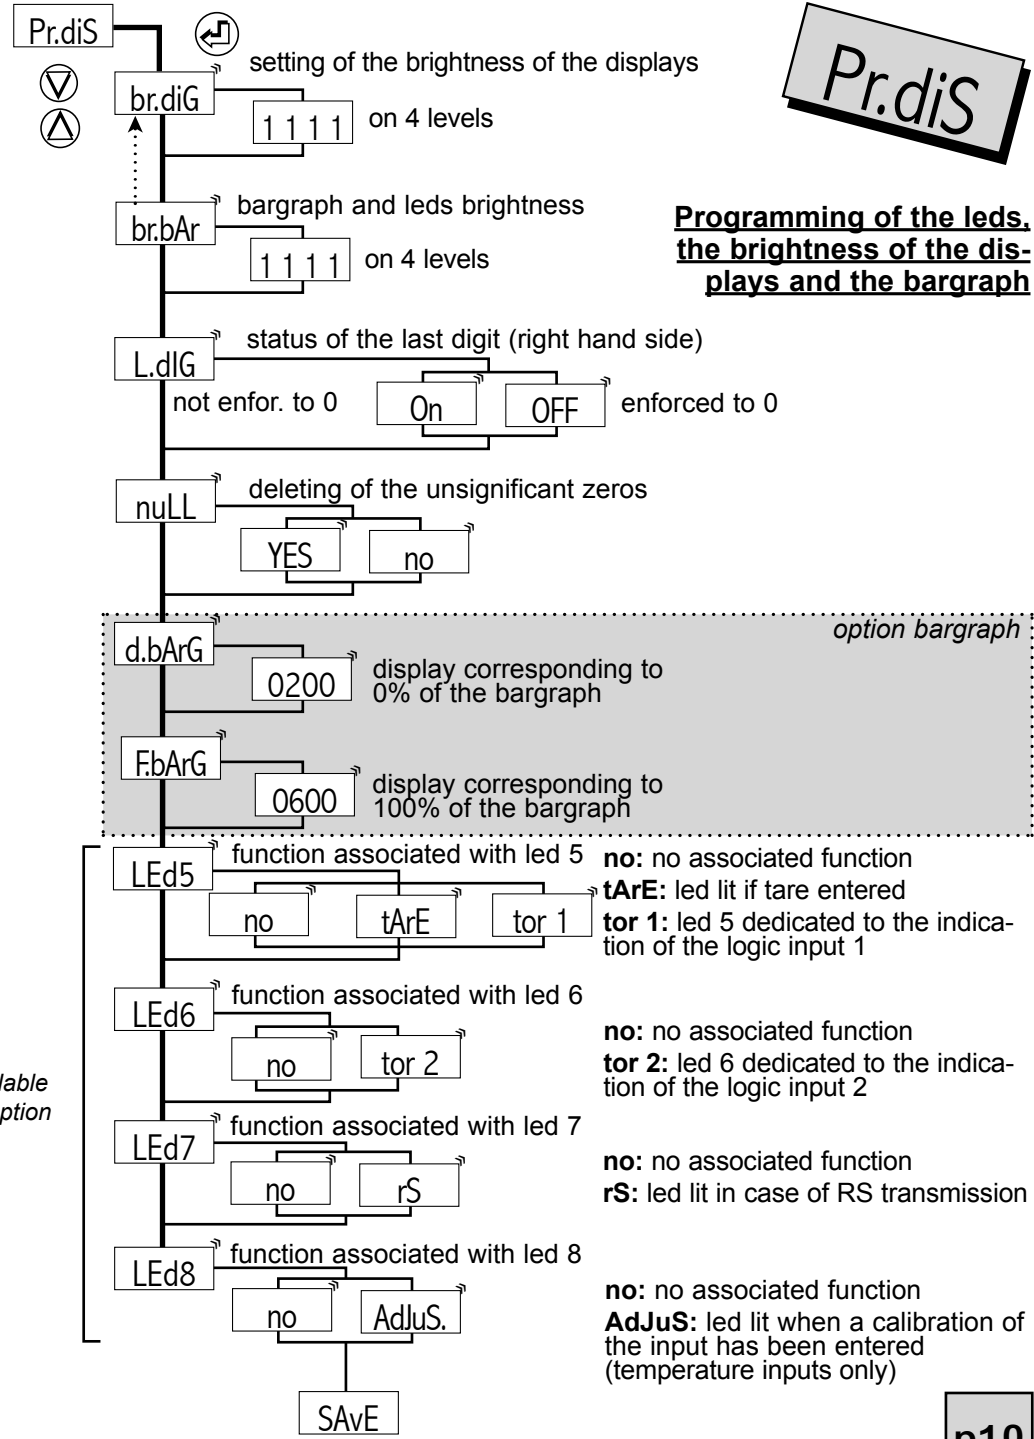


Programming of the leds, the brightness of the displays and the bargraph

available as option

SAVE

See also the display features p15

Exit from the programming with or without saving

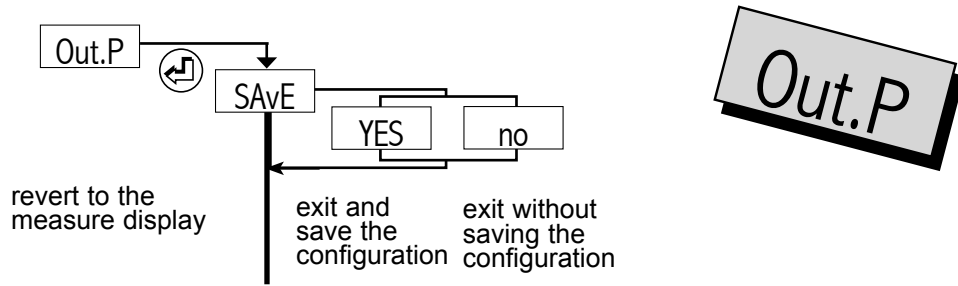

Note: An exit from the programming mode with saving of the configuration (SAVE, YES) will automatically reset the tare, the min. and the max. as well as the alarm recordings to 0.

4.5 Features of the inputs and programming limits

4.5.1 Current input

MA

• **Linear:**

Features

Caliber	Display resolution	Accuracy
from -20 to +20mA	± 1 digit	0.1% of the MR

Measurable limits of the input: -22 to 22 mA

4.5.2 Voltage input

U

• **Linear:** Features

Caliber	Display resolution	Accuracy
-100 to +100 mV -1 to + 1 V -10 to +10 V -300 to 300 V	± 1 digit	0.1% of the MR

Measurable limits: -10% to +10%

That is for example for the caliber 1V: -1.1V to +1.1V

• **Nonlinear:** (see [page 17](#))

4.5.3 Temperature input

Pt 100 dPt ni 100 tc

• Resistive sensor

Pt 100 Platinum sensor Pt 100 Ω in 3-wire mounting
 dPt Measurement of Delta Pt100 2 wire
 ni 100 ni 100 Ω nickel sensor

Sensor type	Measurable limits of the input	Accuracy (MR: measure range)
Pt 100	-200 / 850 °C -328 / 1562 °F	* ± 0.1% of the MR
ni 100	-60 / 260 °C -76 / 500 °F	± 0.1% of the MR
Delta Pt 100	-200 / 270 °C -328 / 518 °F	± 0.1% of the MR

* The influence of the line resistance with $0 < R_l < 25 \Omega$ is included in the accuracy class.

• Thermocouple tc

Type: J, K, N, S, B, W5, T, R, E, W, W3, L

Efficiency of the cold junction compensation:
 0.03°C / °C ±0.5°C from -5°C to +55°C

Cold junction compensation CJC

Internal CJC-I

External CJC-E Programmable from -10°C to 60°C
 +14°F to 140°F

Thermocouple		Measurable limit of the input		Accuracy in % of the MR*
		°C	°F	
tc-j	J	-160 / 1200°C	-256 / 2192°F	0.1 %
tc-CA	K	-270 / 1370°C	-454 / 2498°F	0.1 %
tc-n	N	0 / 1300°C	32 / 2372°F	0.1 %
tc-5	S	-50 / 1770°C	-58 / 3218°F	0.1 %
tc-b	B	200 / 1820°C	392 / 3308°F	0.1 %
tc-C5	W5	0 / 2300°C	32 / 4172°F	0.1 %
tc-t	T	-270 / 410°C	-454 / 770°F	0.1 %
tc-r	R	-50 / 1770°C	-58 / 3218°F	0.1 %
tc-E	E	-120 / 1000°C	-184 / 1832°F	0.1 %
tc-C	W	1000 / 2300°C	1832 / 4172°F	0.1 %
tc-C3	W3	0 / 2480°C	32 / 4496°F	0.1 %
tc-L	L	-150 / 910°C	-238 / 1670°F	0.1 %

* 30µV typical (60µV max.) on the others

4.5.4 Resistance and potentiometer inputs

• Resistance

Caliber	Measurable limits of the input	Accuracy in % of the MR
0 / 400 Ω	0 / 440 Ω	0.1%
0 / 2000 Ω	0 / 2200 Ω	0.5%
0 / 8 KΩ (optional)	0 / 8.8 KΩ	0.1%

• Potentiometer:

Caliber	Accuracy in % of the MR
from 100Ω to 10 KΩ	0.1%

4.5.5 Logic inputs (option TOR)

- Board of 2 logic inputs: Input signal 24 Vdc

Possible functions:

HoLd Display hold in case of activation of the logic function. The display and the analog output remain fixed in case of variation of the input signal. The relays keep reacting to the input signal.

CLr.M Zero reset of the min. and the max. The activation of the logic function will reset the min. and the max. to 0.

tArE Activation of the function tare. The meter switches to the mode tare, the tare being the display value present at the moment when it is activated.

Fct.P Function moving of the decimal point

Point In case of activation of the logic function the decimal places itself as has been programmed.

4.6 Features of the outputs and programming limits

4.6.1 Analog output AnA.

0/4-20mA active or passive current output (Vmax.=30Vdc) or 0-10V voltage output

- Accuracy: 0.1 % in relation to the display (at +25°C)
- Residual ripple ≤ 0.2%
- Admissible load $0\Omega \leq Lr \leq 600\Omega$ (current)
 $Lr \geq 5\text{ k}\Omega$ (voltage)
- Programmable scale ratio with enlarging effect
- Response time: 40 ms in relation to the display

tyPE Indication of the output type (voltage or current)

PArA. Choice of the parameter assigned to the output for the down and full output scale (in display points if PArA. = diSP.) (in input scale points if PArA. = InPut.)

d.out Down scale of the analog output (eg. 04.00 (4mA))

F.out Full scale of the analog output (eg. 20.00 (20mA))

dO.diS Display value corresponding to the output down scale

FO.diS Display value corresponding to the output full scale

In mode measurement, the analog output can not overstepp 10% of the greatest of the 2 values: d.out and F.out

4.6.2 Digital output:

- RS485 (2 wire) digital data link
- Protocoles **MODBUS-JBUS** format of the data: integer and double integer
- Transmission format:
 - 1 start bit
 - 8 bits without parity or 9 bits with parity
 - 1 stop bit

SLAUJ	Slave number between 1 and 255
bAud	Transmission speed between 1200 and 19200 bauds
PAR	Transmission parity
ForM	Transmission format (rank of the bytes in a transmitted integer)
dELAy	Time lapse before any response: ON: 75ms OFF: 10ms

Table of the **modbus addresses**, used functions, see the annexe p25.

4.6.3 Relay outputs:

2 relay outputs rEL.1 rEL.2
 or 4 relay outputs rEL.1 rEL.2 rEL.3 rEL.4


- Hysteresis independently programmable in the display unit
- Time delay independently programmable from 0 to 25 s, in 0.1 s increases
- NO-NC contact 8 A - 250 V on resistive load

Activation or de-activation of the alarm x AL.X

On	The status of the relay x depends on the entered programming
OFF	The relay x remains still.
PArAx	Programming of the parameter assigned to the alarm x
InPut.	Setpoints and hysteresis in input scale points
diSPL.	Setpoints and hysteresis in display scale points


Choice of the operating mode: ModE.x

• Mode setpoint

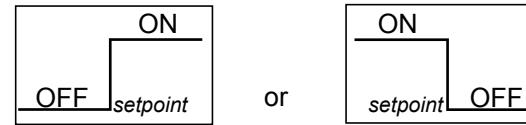

Caption:
 ON coil supplied
 OFF coil not supplied

• Mode window

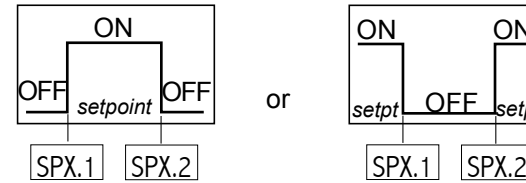


Choice of the status of the relay associated led LEdx

The led indicates the alarm status.


On	Led lit when relay active (coil supplied)
OFF	Led still when relay active (coil supplied)

HYSt.x Setting of the hysteresis in display points.
 The hysteresis is active on switching from lit led to still led, that is to say on switching out of alarm, as the led represents the alarm status.

• Mode setpoint

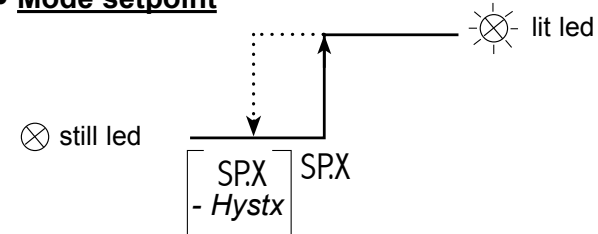

• Mode window

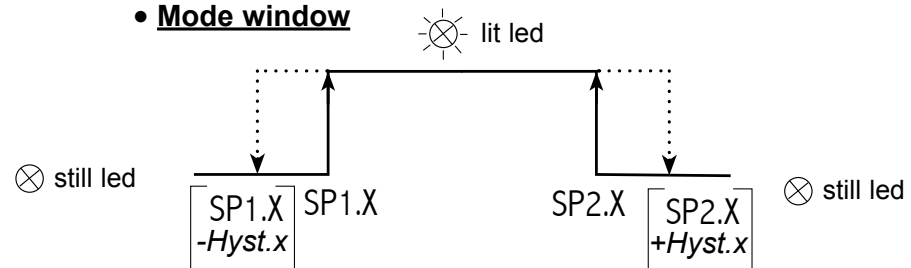

• **Time delay on the alarm**

The relay time delay is adjustable from 000.0 to 025.0s., in 0.1s increases. It is active both on switching and switching back.

• **Positioning of the time delay**

Time delay on the switching on alarm.

Time delay on the switching on alarm and out of alarm.

• **Latching function**

Allows recording the alarm after a setpoint has been passed. When the measure reverts below the alarm setpoint, the relay remains on and the led blinks to warn the user that the setpoint has been passed (to reset the alarm recordings to 0 see the menu p19).

Note: An exit from the mode programming with saving of the configuration will reset the alarm recordings to 0.

• **Display of alarm messages**

A programmed alarm message can be made to appear alternating with the measure. The message will appear only during the alarm, that is to say while the associated led is lit.

• **Setting of the setpoints:** There are 2 ways to adjust setpoints:

- either in mode programming entering the correct access code
- or by pressing simultaneously and if the access to a quick entering has been allowed on the programming of the code (see page 18).

4.6.4 Safeties:

• **Self-diagnosis:**

The meter permanently watches its components for any drifts. The self-diagnosis serves to warn the user in case of abnormal increase of these drifts before they may provoke false measures.

The self-diganosis error information can be reported:

• On the display: An error message appears alternating with the measure; an error code is registered and can be read in the menu About (see page 18).

Coding:

- 1 : Programming error
- 4 : Offset error
- 8 : Input calibration error
- 16 : Output calibration error
- 32 : Cold junction compensation error
- 64 : Upper or lower electrical overstepping of the input.

If the instrument detects for instance an offset error (4) and a programming error (1) **the error code will be 5** (4+1).

• On the relays:

- No influence on the relay in case of self-diagnosis error
- Relay de-activated (coil supplied) in case of self-diagnosis error
- Relay activated (coil supplied) in case of self-diagnosis error

Note: The led is either still or lit according to its programming in the menu rELAY.

• On the analog output

If a return value has been entered
Value between: 0 and 22 mA (current output)
or 0 and 11 V (voltage output)

• **Sensor rupture**

The sensor rupture can be detected on the inputs mV, Tc, Pt100, Ni100, ΔPT100, resistance, and current if down and full scale > 3.5 mA.

The sensor rupture information can be reported:

• On the relay

- No influence on the relay in case of sensor rupture
- Relay de-activated (coil not supplied) in case of sensor rupture
- Relay active (coil supplied) in case of sensor rupture

Note: The led is either still or lit according to its programming in the menu rELAY.

• On the analog output

If a return value has been entered
Value between: 0 and 22 mA (current output)
or 0 and 11 V (voltage output)

• On the display: Message

Note: The sensor rupture detection has a priority over the self-diagnosis.

• **Disconnection of the sensor rupture** (If mV or temperature input)

The sensor rupture can be disconnected in order not to disturb some calibrators which may be sensitive to the rupture detection current.

In the menu :

- Disconnection of the sensor rupture, or not
- Sensor rupture detection on
- Disconnection of the sensor rupture

4.6.5 Display features:

The parameters down and full display scale, cut-off and ordinates (if input linearised in segments) are to be considered in the magnitude of the programmed physical scale. The setpoints, hysteresis, dO.dis and FO.dis for the analog output can be programmed either in input magnitude or in displayed magnitude (according to PARA).

For the *example 1*, with PARA1 «diSP» validated, a setpoint on the relay 1 (SPI.I) with a value of 30.0 corresponds to a setpoint of 30.0 m3. If the display overstepps 30.0m3 (if the input exceeds 5,60 mA) the status of the relay 1 will change.

Point Position of the decimal point for the inputs other than temperature inputs

rESOL. Display resolution for the temperature inputs **0.1°** or **1°**

Funct **LinEA** linear input

root square root extraction

$\sqrt{\quad}$ of the measure brought back in % of the programmed measure range

Example for a 4-20mA input: 12mA gives 0.707 ($\sqrt{0.5}$)

Li.SPE The function square root tends to amplify the background noise of the input signal when getting near zero. To avoid the ripples caused by this noise, simply programme a cut-off value (in display points).

special linearisation

d.diSP Display corresponding to the input down scale (except temperature inputs) **d.in**

F.diSP Display corresponding to the input full scale (except temperature inputs) **F.in**

Cut.vA Only for process, resistance, potentiometer inputs, expressed in display points.

– If the display full scale > display down scale and if the display is \leq than the cut off value then it will be held at the down scale.

– If the display full scale < display down scale and if the display is \geq than the cut off value then it will be held at the down scale.

For a 4/20 mA signal from a level sensor on a tank, the following programming is displayed:

POINT = _ _ . _ FUNCT = LinEA

d.in = 4.00

F.in = 20.00

d.diSP = 000.0

F.diSP = 300.0

for:

4 mA from the sensor, display = 000.0 m3

12 mA from the sensor, display = 150.0 m3

20 mA from the sensor, display = 300.0 m3

Filt • **Response time:**

Integration indice of the digital filtering:

Programmable from 0 to 10; use in case of unsteady input signal.

Filt	0	1	2	3	4	5
Typical response time at 90%	120 ms	400 ms	600 ms	1 s	1.4 s	2 s
		6	7	8	9	10
	3 s	5 s	7.5 s	10 s	15 s	

To obtain the maximum response time add 240 ms.

Note: For the response time of the analog outpt, add 40ms to the values given in the table.

For the relays: add the time delay programmed on the alarms.

Setting of the digits brightness **br.diG**

1111 Lowest brightness

4444 Strongest brightness

• **Setting of the bargraph and the leds brightness**

br.bAr

1111 Lowest brightness 4444 Strongest brightness

The brightness level can be visualised directly on the leds 5 to 8 and on the bargraph.

Caution: during the setting, the 4 leds and the bargraph no longer represent the measure, including also in mode reading.

• **Inhibition of the last digit** (bottom weight) L.dIG

In the mode programming, the menu L.dIG allows suppressing the display of the last digit, the latter will be enforced to 0 if OFF is validated.

• **Deleting of the insignificant zeros** nuLL

nuLL = YES Suppresses the display of the insignificant zeros on the left hand side.

Eg.: Value to be displayed: 0015

nuLL = no Display = 0015
= YES Display = 15

Eg.: Value to be displayed: 00.15

nuLL = no Display = 00.15
= YES Display = 0.15

• **Display factor of the bargraph** (option bargraph only)

d.bArG Display corresponding to a still bargraph (0%)

F.bArG Display corresponding to a fully lit bargraph (100%)

In case of overstepping the bargraph starts to flash. A sensor rupture will be shown on the bargraph by the lighting of 1 led out of 2.

• **Programming of the leds 5 to 8** (available as option)

Programming of led 5 LEd5

no Led still (no associated function)
tArE The led 5 indicates that the instrument is in mode tare
tor 1 The led 5 will be lit when the logic input 1 is active

Programming of led 6 LEd6

no Led still (no associated function)
tor 2 The led 6 will be lit when the logic input 2 is active

Programming of led 7 LEd7

no Led still (no associated function)
rS The led 7 will be lit during the instrument response

Programming of led 8 LEd8

no Led still (no associated function)
AdJuS The led 8 will be lit when a calibration of the down and/or full display scale (see page 21) has been entered (temperature inputs only)

Choice of the measure range:

The measure range (unidirectional or bidirectional scale) depends on the value entered for the parameters d.in and F.in
If the value d.in or F.in is negative the meter will operate with a bidirectional input scale.
If the values d.in and F.in are both positive the meter will operate with a unidirectional input scale.

Example for a 10V caliber:

d.in = -1.0V F.in = 10V (bidirectional input)

The measure range is from -11V to +11V

d.in = 0V F.in=10V (unidirectional input)

The measure range is from -1V to 11V

Thermic drift < 150 ppm/°C

• **Nonlinear:**

Extraction of the square root root

Note: The function square root tends to amplify the background noise of the input signal when getting near zero.

To avoid the ripples caused by this noise, simply programme a cut-off value (in display points).

– If the display full scale > display down scale and if the display is ≤ than the cut off value then it will be held at the down scale.

– If the display full scale < display down scale and if the display is ≥ than the cut off value then it will be held at the down scale.

Special linearisation:

Li.SPE

For specific applications such as the measurement of volumes, the meter can memorise an unlinear curve, programmable in X and in Y.


The curve resulting from your equation can be replaced by a series of linear segments, with a maximum of 20 points (19 segments).

Note: the values of the abscisses (x) must go increasing d.in < value of A01 < value of A02...< An-1.

Example:

For a layed cylindric tank, 1 meter high (h) and 1 meter long (l); a 0-20 mA linear sensor measures the height of the liquid surface line:

Input to the meter: height h
 0 meters -> 0 mA (empty tank)
 1 meter -> 20 mA (full tank)
 with $\cos \beta/2 = (R-h)/R$
 $\sin \beta/2 = C/2R$

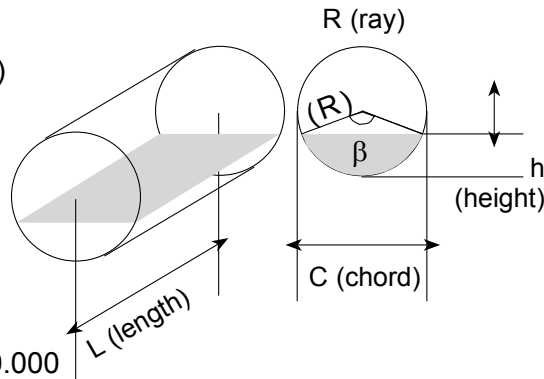

Display of the meter:

Empty tank volume d.diSP = 0.000
 Full tank volume F.diSP = 0.785

$$\text{Volume} = L [\pi R^2 \beta/360 - C(R-h)/2]$$


Say a curve of 10 equally long segments:
 Measure range / number of segments = 20mA/10 = 2mA length of the segment. For 10 segments nbr = 11.

Input mA	Height m	Degree	Chord m	Volume m ³	Outputs in mA
A00	0	0.00	0.00	B00 0.000	00.00
A01	2	73.74	0.60	B01 0.041	01.04
A02	4	106.26	0.80	B02 0.112	02.85
A03	6	132.84	0.92	B03 0.198	05.04
A04	8	156.93	0.98	B04 0.293	07.47
A05	10	180.00	1.00	B05 0.393	10.00
A06	12	203.07	0.98	B06 0.492	12.54
A07	14	227.16	0.92	B07 0.587	14.96
A08	16	253.74	0.70	B08 0.674	17.17
A09	18	286.76	0.60	B09 0.745	18.98
A10	20	360.00	0.00	B10 0.785	20.00


Programming:

nb = 11

Programming from A00 to A10 and from B00 to B10 according to the table.

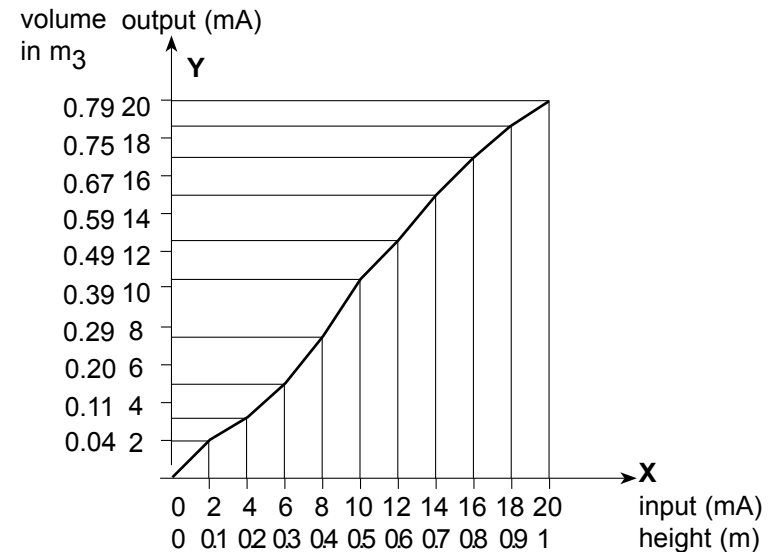

4.7 Reading of the configuration rEAd

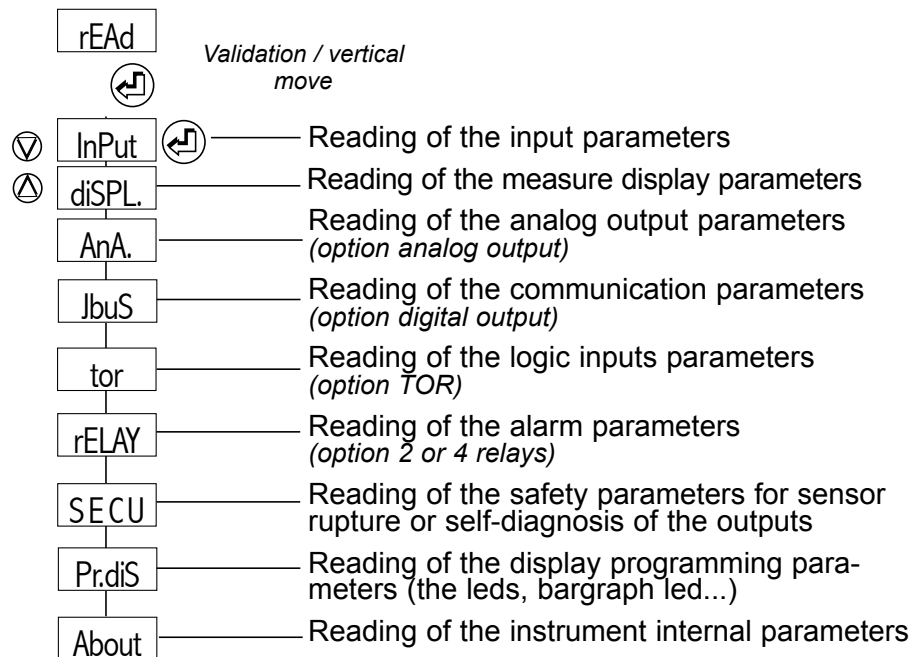

In each reading submenu press and to move, and to visualise parameters.

If no key is pressed during 20 s. the instrument will revert to the measure display.

Submenu

XXXXX
12345

X1 : - : no analog output
A : analog output


X2 X3 : - - : no relay output
r- : output 2 relays
r4 : output 4 relays

X4 : - : no RS output
n : RS output

X5 - : no logic input
t : 2 logic inputs

(.) : decimal point still:
no bargraph

“.” : decimal point lit:
option bargraph

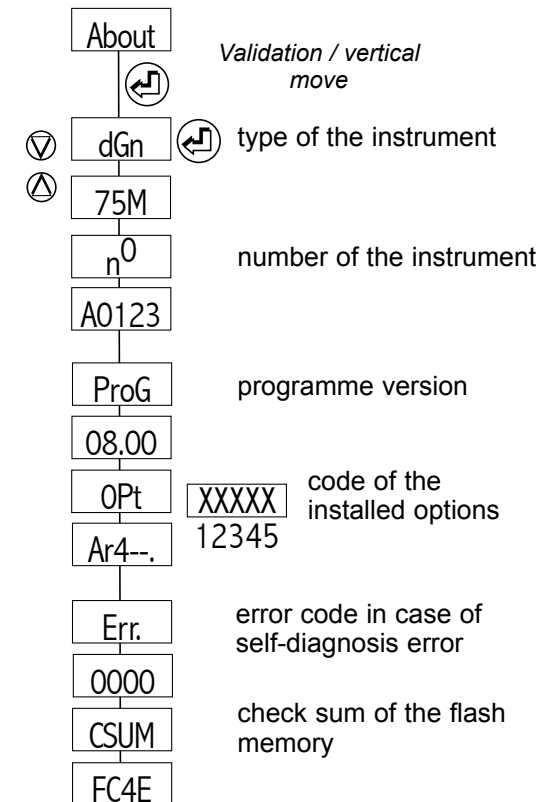


4.8 Access code

An access code which can be set from 0000 to 9999 serves to protect the meter and its setpoints from unauthorized programming, and to lock the access to some functions.

0 0 0 0		Factory code		
x	x	x	x	
⋮	⋮	⋮	⋮	0 to 5 Access to the process calibration
⋮	⋮	⋮	⋮	6 to 9 No access
⋮	⋮	⋮	⋮	0 to 5 Access to the display and output simulations
⋮	⋮	⋮	⋮	6 to 9 No access
⋮	⋮	⋮	⋮	0 to 5 Access to the function “tare” (except temperature inputs)
⋮	⋮	⋮	⋮	6 to 9 No access
⋮	⋮	⋮	⋮	0 to 5 Access to the quick entering of alarm setpoints
⋮	⋮	⋮	⋮	6 to 9 No access

4.9 Programming of a new access code

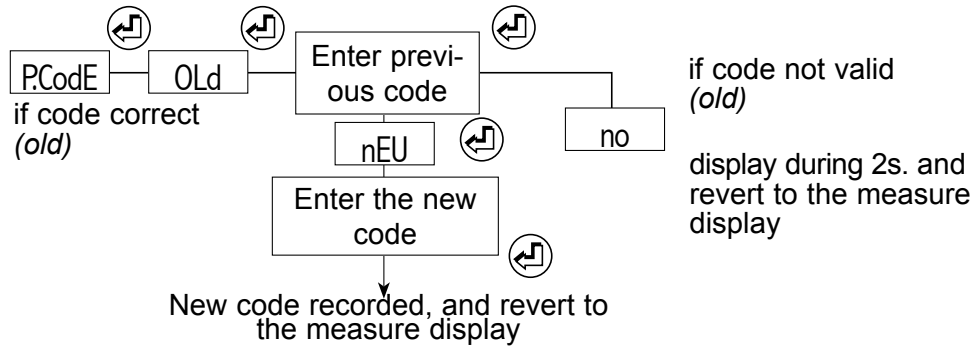


Reminder: If no key is pressed during 1 min. the instrument will revert to the measure display. The access code is 0000 on factory exit.

4.10 Functions which can be accessed from the main menu

4.10.1 Simulation of the display

(accessible according to the programmed access code and if option relays or analog output)

The display can be simulated with the meter in order to validate the configuration of the analog output and the relay outputs in the installation.

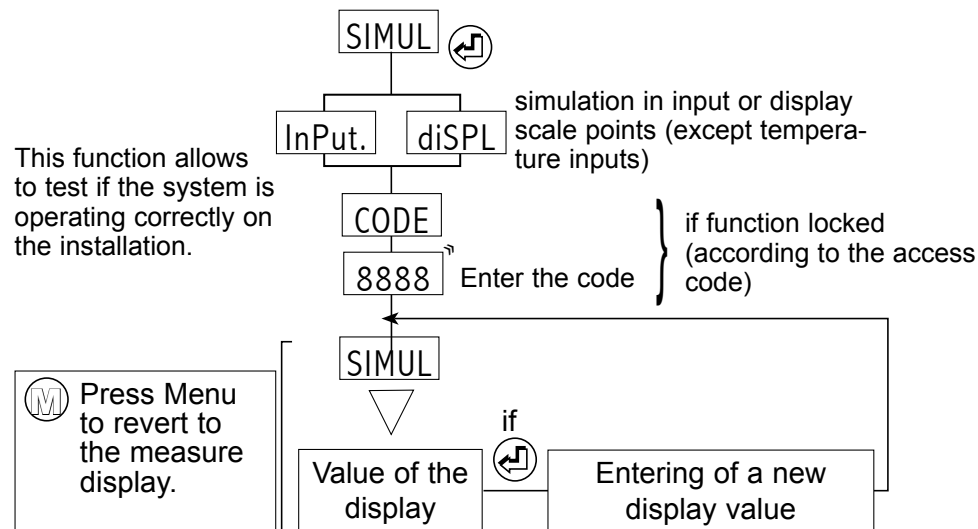


Note: The instrument no longer measures during the simulation. The analog output and the relay outputs will react according to the entered display. If alarm messages have been programmed they may appear during the simulation.

4.10.2 Simulation of the analog output (mode generator)

(accessible according to the programmed access code and if option analog output)

This function allows testing the correct operating of the system at the installation.

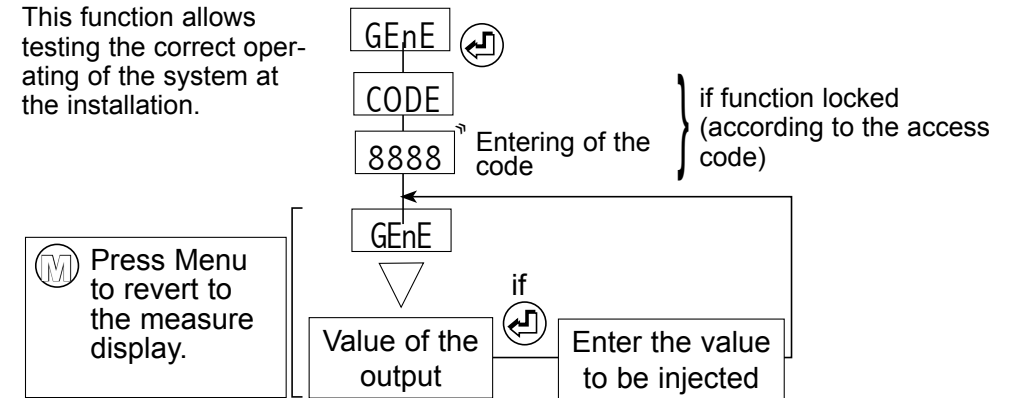


Note: The instrument will carry on measuring during the simulation. Only the analog output will no longer react to the measure.

4.10.3 Menu CLEAR : Deleting of the recorded alarms

If the latching function has been programmed:
The status of the relay will be memorised after the setpoint has been passed.

If the setpoint is passed back the other way, the status of the relay does not change and the corresponding led starts to blink.
To come back to the normal status (led not blinking and relay in the correct status, use the menu CLEAR).

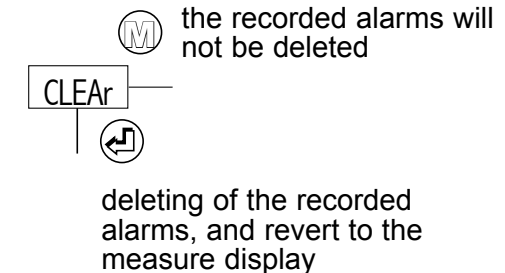


Reminder: If no key is pressed during 20 s. the instrument will revert to the measure display.

Note: An exit from the mode programming with saving of the configuration will reset the alarm recordings to 0.

only for process, resistance and potentiometer inputs

4.10.4 Menu CLr.tA : Suppressing of the programmed tare
(accessible according to the programmed access code)

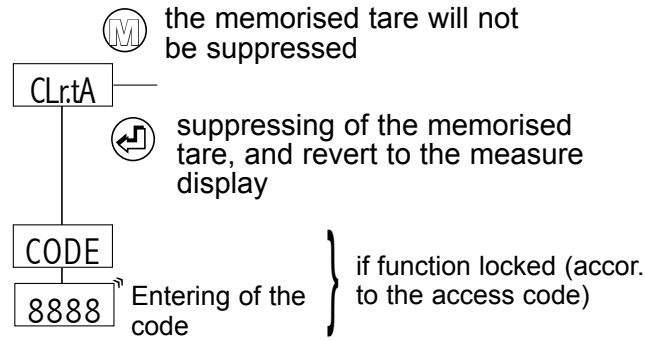


Reminder: If no key is pressed during 20 s. the instrument will revert to the measure display.


5. FUNCTIONS WHICH CAN BE ACCESSED DIRECTLY FROM THE MEASURE DISPLAY

5.1 Functions which require pressing only 1 key:


a / Display of the min. value

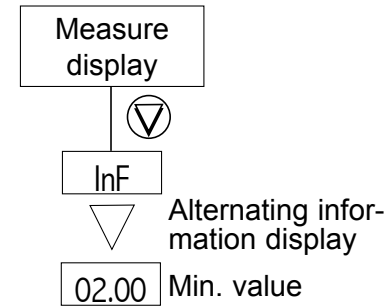

b/ Display of the max. value

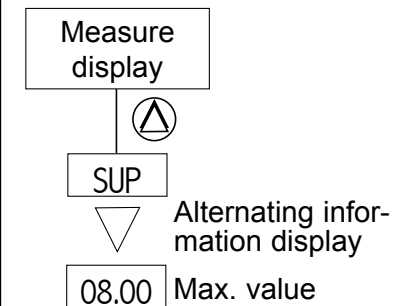

c / Deleting of the min. and max. values

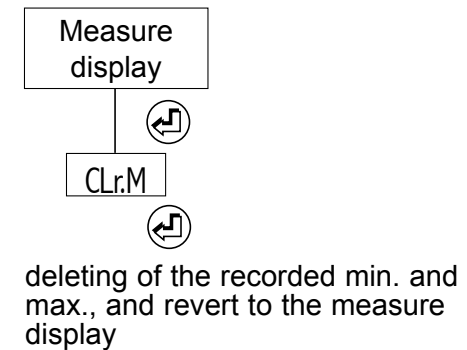

(M) The instrument will revert to the measure display.



Reminder: If no key is pressed during 20 s. the instrument will revert to the measure display.



Note: An exit from the mode programming with saving of the configuration will reset the min. and max. values to 0.

5.2 Functions which require pressing several keys:





5.2.1 Process calibration



(accessible acc. to the programmed access code)



  Calibration of the display down scale (Adj.Lo)


  Calibration of the display full scale (Adj.Hi)


If the function has been locked (according to the access code) the code must be entered.

After injecting an input signal corresponding to the down (or full) display scale, press simultaneously  and  (or  and ) The message Adj.Lo (Adj.Hi) will appear alternating with the value, to indicate that you are in the menu adjustment.

The down (or full) display scale can be increased or decreased by pressing  and .

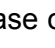If you keep pressing  or  during 3 seconds you can increase or decrease the display value quicker.

Press  to validate the calibration. Once the calibrations have been validated, the input will keep the same calibration even after a setting off tension.

Press  (or do not press any key during 20 s) to revert to the measure display without modification.

• Case of a process, resistance or potentiometer input

The instrument will then re-adjust its scale factor and its display factor in order to obtain the required result on the display.

• Case of a temperature input

On a temperature input, if one of the two settings is performed this will correspond to an offset, which means that all points will be shifted by the same quantity.

But if the two settings are performed the slope and the offset will be corrected in order to obtain the required result.


example:

For a PT100 input for 0°C the obtained display is -000.3

For 500°C the obtained display is 0500.2. To correct this display, the display down scale must be shifted by 3 points to obtain 000.0 and the display full scale by -2 points to obtain 0500.0.

note: only for **temperature inputs:**

From the menu rEAd, the performed scale calibrations can be visualised in the submenu InPut:

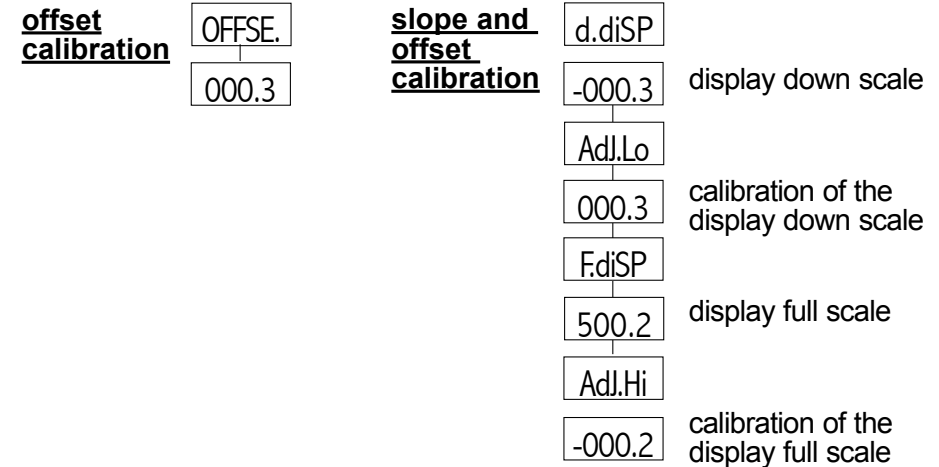

Suppressing of the input calibration:



(Case of a temperature input only)

The menu AdjUs. in the mode programming of a temperature input allows to suppress the entered calibration, or not.

no: the instrument will revert to the factory settings

Yes: the instrument will take the programmed (offset and/or slope) adjustments into account.

5.2.2 Visualisation of the direct measure

Press  and  to visualise the signal directly without any processing: scale factor, square root, linearisation

- in mV, V or mA for process inputs,
- in mV for the thermocouple input,
- in Ω for the Pt100, Ni100 input,
- in Ω for the resistance input,
- in percents for the potentiometer input,
- temperature of the hot sensor for the ΔPt100 input.

5.2.3 Visualisation and setting of the alarm setpoints

Option 2 or 4 relays



Setting of the setpoints: There are 2 ways to adjust setpoints:


- either in mode programming entering the correct safety access code (see p18)


- or by pressing simultaneously  and 


If the function has been locked (according to the access code) the code must be entered.

The meter will then show the message SP.x or SPx.x alternating with the value of the corresponding setpoint.

The various values of the setpoints can be accessed by  and .



These setpoints can then be modified (if access code < 6000 (see p18)) by pressing 

When the setpoint is adjusted press  to revert to the setpoints reading menu.

Once all the setpoints have been adjusted, simply press  and the meter will revert to the mode measure, taking the new values into account.

If no key is pressed after 60 s. the meter will revert to the measure display without modification of the setpoints value.

5.2.4 Setting of the tare (except temperature inputs) (accessible according to the programmed access code)

Press  and  to enforce the signal currently present on the input as display down scale d.disP

If the function has been locked (according to the access code) the code must be entered.

Note: The tare will not be recorded in case of power supply cut.
To suppress the tare, validate the menu CLr.tA in the main menu p20.
An exit from the mode programming with saving of the configuration will reset the tare to 0.

6. ERROR MESSAGES

2000 Measure in overrange	---- Upper or lower electrical overstepping of the input
OPEn Sensor rupture	OL Displayable value overload
Er.01 Value set out of range	Er.xx Self-diagnosis error (see page 14) or E.xxx

7. GENERAL WARRANTY TERMS

WARRANTY applying and duration

This appliance is guaranteed for a duration of 1 year against any design or manufacturing defects, under normal operating conditions.

Processing conditions * : Processing not under warranty will be submitted to the acceptance of a repair estimate. The customer will return the products at his charge, and they will be restored to him after processing. Without a written agreement on the repair estimate within 30 days, the products will not be held.

* Complete warranty terms and details available on request.

8. LEXIQUE

Messages shown by the meter in mode programming and/or in mode reading

General access

rEAd	Access to the reading of the parameters
ProG	Access to the programming of the input and output parameters
CodE	Code for access to the programming of the input and output parameters
P.CodE	Programming of a new access code
SIMUL	Access to the display simulation
GEnE	Access to the simulation of the analog output
CLEAr	Deleting of the recorded alarms
CLr.tA	Suppressing of the tare

Inputs

Access to the submenu programming of the input

Type of the input

Voltage input

Current input

Temperature input

Potentiometer input

Resistance input

Voltage input and current input

Choice of the voltage caliber

Input 0 to 10 V (or -10/10V)

Input 0 to 300 V (or -300/300V)

Input 0 to 100 mV (or -100/100mV)

Input 0 to 1 V (or -1/+1V)

Temperature input

Type of temperature sensor

Pt100 input

Thermocouple input

Type of thermocouple

Thermocouple K (see the table page 13)

Type of cold junction compensation

Internal CJC

External CJC

Value of the external CJC

Delta PT100 input

NI100 input

Type of degrees

Celsius degree

Fahrenheit degree

Input calibration

Offset calibration

Slope and offset calibration, display down scale

Adjusting of the display down scale

Slope and offset calibration, display full scale

Adjusting of the display full scale

Potentiometer input and resistance input

Logic inputs (option TOR)

Access to the submenu programming of the logic inputs

Programming of the logic input 1

Programming of the logic input 2

Function moving of the decimal point

Place of the decimal point

Function deleting of the min. and max.

Function display hold

Function Tare

Display

<input type="text" value="diSPL."/>	Access to the submenu programming of the display
<input type="text" value="Point"/>	Choice of the decimal point location
<input type="text" value="--.--"/>	Place of the decimal point
<input type="text" value="d.in"/>	Input down scale
<input type="text" value="F.in"/>	Input full scale
<input type="text" value="Funct"/>	Choice of the processing function
<input type="text" value="LinEA."/>	Linear
<input type="text" value="root"/>	Extraction of the square root
<input type="text" value="Li.SPE"/>	Special linearisation
<input type="text" value="nb"/>	Number of linearisation points
<input type="text" value="Axx"/>	Abscisse of a special linearisation point
<input type="text" value="Bxx"/>	Ordinate of a special linearisation point
<input type="text" value="d.diSP"/>	Display down scale
<input type="text" value="F.diSP"/>	Display full scale
<input type="text" value="Cut.oF"/>	Cut-off programmable or not
<input type="text" value="rESOL."/>	Display resolution for the temperature inputs
<input type="text" value="0.1<sup>0</sup>"/>	Resolution 1/10 th of degree
<input type="text" value="1<sup>0</sup>"/>	Resolution 1 degree
<input type="text" value="FiLt."/>	Integration indice

Display parameters

<input type="text" value="Pr.diS"/>	Submenu programming of the display features
<input type="text" value="br.diG"/>	Setting of the digits brightness (4 levels)
<input type="text" value="1 1 1 1"/>	Lowest brightness
<input type="text" value="4444"/>	Strongest brightness
<input type="text" value="br.bAr"/>	Adjusting of the bargraph and the leds brightness
<input type="text" value="1 1 1 1"/>	Lowest brightness
<input type="text" value="4444"/>	Strongest brightness

<input type="text" value="L.dIG"/>	Last digit (bottom weight)
<input type="text" value="On"/>	Last digit in service
<input type="text" value="OFF"/>	Last digit enforced to 0
<input type="text" value="nuLL"/>	Deleting of the insignificant zeros
<input type="text" value="YES"/>	Yes
<input type="text" value="no"/>	No
<input type="text" value="d.bArG"/>	display corresponding to 0% of the bargraph
<input type="text" value="F.bArG"/>	display corresponding to 100% of the bargraph
<input type="text" value="LEd5"/>	<i>Assignment of the led 5</i>
<input type="text" value="no"/>	No attributed function
<input type="text" value="tArE"/>	Led lit if a tare has been entered
<input type="text" value="tor 1"/>	Led 5 dedicated to the indication of the logic input 1
<input type="text" value="LEd6"/>	<i>Assignment of the led 6</i>
<input type="text" value="no"/>	No attributed function
<input type="text" value="tor 2"/>	Led 6 dedicated to the indication of the logic input 2
<input type="text" value="LEd7"/>	<i>Assignment of the led 7</i>
<input type="text" value="no"/>	No attributed function
<input type="text" value="rS"/>	Led lit in case of transmission on the RS
<input type="text" value="LEd8"/>	<i>Assignment of the led 8</i>
<input type="text" value="no"/>	No attributed function
<input type="text" value="AdJuS."/>	Led lit when a calibration of the input has been entered (temperature inputs only)

Analog output

<input type="text" value="Out.U"/>	Access to the voltage output programming submenus
<input type="text" value="Out.I"/>	Access to the current output programming submenu
<input type="text" value="PArA."/>	
<input type="text" value="InPut."/>	parameters in input scale points
<input type="text" value="diSPL."/>	parameters in display scale points
<input type="text" value="d.out"/>	Down scale of the analog output
<input type="text" value="F.out"/>	Full scale of the analog output
<input type="text" value="dO.diS"/>	Access to the display corresponding to the output down scale
<input type="text" value="FO.diS"/>	Access to the display corresponding to the output full scale

Digital output

JbuS	Access to the RS output programming submenu
SLAvE	Slave number
bAud	Transmission speed (baud rate)
1200	Possible speed
19200	Possible speed
Parit	Choice of the parity
ForM	Transmission rank of the bytes of an integer
dELAY	Time lapse before any response
On	75ms
OFF	20ms

Relay outputs: x: 1 to 4

rELAY	Access to the relay outputs programming submenu
rEL.x	Access to the programming of the relay x
AL.x	Activation of the relay output 1
On	Activation
OFF	De-activation
PARA.x	
InPut.	Setpoints and hysteresis in input scale points
diSPL.	Setpoints and hysteresis in display scale points
ModE.x	Operating mode of the relay x
1-	Mode setpoints
-1	Mode setpoints
1-1	Mode window
-1_1-	Mode window
SPx	Value of the setpoint in mode setpoint
SPx.1	Value of the first setpoint in mode window
SPx.2	Value of the second setpoint in mode window
HYSt.x	Value of the hysteresis in display points
tiME.x	Time delay on the relay X

t.Actx	Positioning of the time delay
SIMPL.	Time delay on switching on alarm
doubl	Time delay on switching on alarm and off alarm
LEdx	Programming of the relay associated led
On	Led lit when relay active (coil supplied)
OFF	Led still when relay active (coil supplied)
MEM.x	Recording of the alarm X
YES	Recording
no	No recording
MESx	Alarm message
YES	Message
no	No message

Safeties

SECU	Access to the safeties programming submenu
rUPt	Programming of the sensor rupture safety
CAPt.	Disconnection (or not) of the sensor rupture
OFF	Disconnection active
On	Disconnection inactive
rEL.X	Status of the relay X in case of sensor rupture
OFF	No sensor rupture associated with the relay
LO	Relay de-activated in case of sensor rupture (coil not supplied)
HI	Relay activated in case of sensor rupture (coil supplied)
out.U	Return value (or not) of the output in case of sensor rupture
or	
out.I	Return value (or not) of the output in case of sensor rupture
YES	Return value requested
no	No return value
rEPLi	Return value
diAG.	Programming of the self-diagnosis safety
rEL.X	Status of the relay X in case of self-diagnosis error
OFF	No self-diagnosis associated with the relay
LO	Relay de-activated in case of self-diagnosis error (coil not supplied)
HI	Relay activated in case of self-diagnosis error (coil supplied)

out.U out.I Return value (or not) of the output in case of self-diagnosis error
 or
 YES Return value required no No return value
 rEPLi Return value

Saving of the configuration

SAve Saving of the configuration
 YES Saving no No saving

Reading of the instrument internal features

About Access to the submenu reading of the internal features
 dGnx Type of the instrument: DGN 75U, DGN 75T, DGN 75M
 n⁰ Identification numbers
 ProG Programme version
 Programme version number
 OPt Option code
 Value of the option code
 Err. Self-diagnosis error
 Error type
 CSUM Display of the check sum
 Value of the check sum

Other functions

InF Display of the minimum value
 SUP Display of the maximum value
 CLr.M Deleting of the min. and max.

Error messages

 Value set out of range
 Sensor rupture
 Blinking measure: measure in overrange
 Displayable value overload
 Upper or lower electrical overstepping of the input
 } Self-diagnosis error
 }

9. ANNEXE: MODBUS

9.1 Table of the modbus addresses

Word address	Description
0	Sensor primary measure
1	decimal point / unit
2	final measure
3	decimal point / unit
4	final measure min.
5	decimal point / unit
6	final measure max.
7	decimal point / unit
8	value of the analog output n°1
9	decimal point / unit
12	Auto diag 1
13	Auto diag 2
14	Status of the relay 1
15	Status of the relay 2

Measures

The following parameters: sensor primary measure, final measure, min. and max. of the final measure and the values of the analog outputs are transmitted in the form of a module and a unit associated with a position of the decimal point.

Eg.:

Word address	Decimal value	Encoding
0	10 094	module
1	12 289	dec. point / unit

Encoding of the integer decimal point/ unit

H L

 dec. point unit: code of correspondance in the list hereunder

0: no decimal 0: none
 16: 1 decimal 1: V
 32: 2 decimals 2: kV
 48: 3 decimals etc ...

Eg.: 12 289 = 48 X 256 + 1

The integer encodes the unit V with 3 decimals.

The measure read is thus 10.094 V.

Table of the units

Code	Unit	Code	Unit	Code	Unit	Code	Unit	Code	Unit
000		023	MVARh	100	°C	122	mm/s	144	mV DC
001	V	024	GVARh	101	°F	123	cm/s	145	V DC
002	KV	025	Hz	102	%	124	m/s	146	KV DC
003	A	026	Khz	103	mm	125	m/mn	147	mA DC
004	KA	027	Deg	104	cm	126	m/h	148	ADC
005	W	028	Ohms	105	m	127	mm3	149	KA DC
006	KW	029	Kohms	106	km	128	cm3	150	Ohms
007	MW	030	h	107	mBar	129	m3	151	Kohms
008	GW	031	mn	108	Bar	130	g	152	Mohms
009	VAR	032	s	109	Pa	131	kg	153	US.gal/s
010	KVAR	033	%	110	Kpa	132	t	154	US.gal/min
011	MVAR	034	cos PHI	111	Kg/cm2	133	l	155	US.gal/h
012	GVAR	035	to 099 free	112	PSI	134	hl	156	US.gal
013	VA			113	mCE	135	Rpm	157	lb
014	KVA			114	l/s	136	CP/mn	158	C
015	MVA			115	l/mn	137	PH	159	imp
016	GVA			116	l/h	138	mV AC	160	CP
017	Wh			117	m3/s	139	V AC	161	mA
018	KWh			118	m3/mn	140	KV AC	162	A
019	MWh			119	m3/h	141	mAAC	163	mA.h
020	GWh			120	tr/s	142	AAC	164	A.h
021	VARh			121	rad/s	143	KAAC	165	µV
022	KVARh							166	mV

Self-diagnosis integer n°1: (address 12)

bit


(14)	(13)	(12)		(9)	(8)		(6)	(5)	(4)	(3)	(2)	(1)	(0)
------	------	------	--	-----	-----	--	-----	-----	-----	-----	-----	-----	-----

- | | |
|----------------------------------------------------------------|------------------------------|
| (6) measure in overrange by 10% of the caliber | (0) programming error |
| (8) sensor rupture | (1) offset error |
| (9) measure overload (eg. a measure of 15 V on a 10 V caliber) | (2) input calibration error |
| (12) current output value error | (3) output calibration error |
| (13) configuration internal error | (4) reference error |
| (14) memory error | (5) CJC error |

Self-diagnosis integer n°2: (address 13)

bit 15


bit 0



Measure in overrange by 10% of the caliber

Integer status of the relays 1 and 2: (address 14 and 15)

bit 15 bit 3 bit 0



- 1=led lit
- 1=led blinking: mode recording ON and measure not in alarm
- 1=relay ON
- 1=alarm recorded

9.2 Correspondance with the DGN75U/DGN75M version 7.0

Address	Format	nbr of words
200	Value of the analog output in µA (mA output) in mV (10V output)	double integer 2
202	Minimum value of the displayed value	double integer 2
204	Maximum value of the displayed value	double integer 2
206	Displayed measure	double integer 2
208	direct measure	double integer 2
290	Status of the relay 1	integer 1
291	Status of the relay 2	integer 1
292	Status of the relay 3	integer 1
293	Status of the relay 4	integer 1

• Direct measure:

Valu without scale factor for the inputs 100 mV, 1V, 10V, 300V, 20 mA:

- in mV for the 10V input
- in 1/10th of mV for the 1V input
- in µA for the mA input
- in 1/100th of mV for the mV input
- in 1/100th of V for the 300V input

Value of the resistance in 1/100th Ω for NI100 and Pt100

Value of the hot sensor temperature in 1/10th of degree for ΔPt100

Value of the resistance

- in 1/100th Ω for the resistance input 0-400Ω
- in 1/10th Ω for the resistance input 0-2000Ω
- in Ω for the resistance input 0-8000Ω

Value in µV for the thermocouple input


Value in 1/100th of % for the potentiometer input

• Status of the relays:

bit 15

bit 7 bit 6

bit 0




- 1: Led lit
- 1: Led blinking: mode recording and measure not in alarm
- 1: Relay ON
- Alarm recorded

• **Displayed measure:**

The value of the displayed measure is taken up without the decimal point. To read the value of the decimal point, read the word at the address 120.

Address 120:




Position of the decimal point from 1 to 4 (version 10000 points)
from 0 to 4 (version 100000 points)

- 0: Display with 4 decimals (version 100000 points)
- 1: Display with 3 decimals
- 2: Display with 2 decimals
- 3: Display with 1 decimal
- 4: Display with 0 decimals


9.3 Description of the born modbus functions:

Reading of N words: Function n°3

Request sequence:

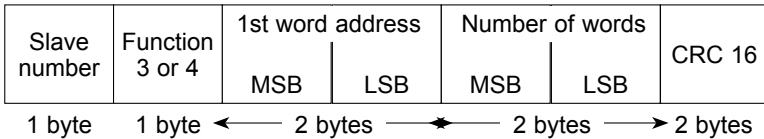


Response sequence:

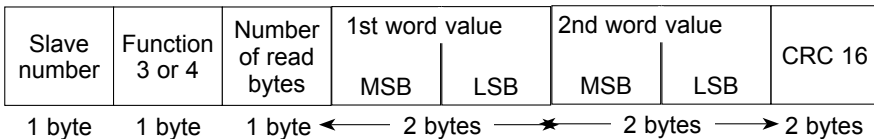


Writing of N words: Function N°16:

Request sequence:

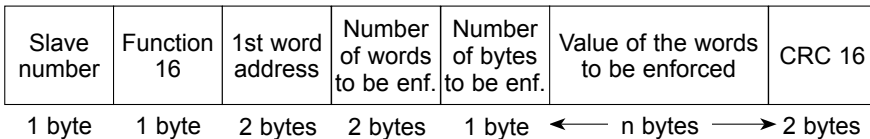


Response sequence:

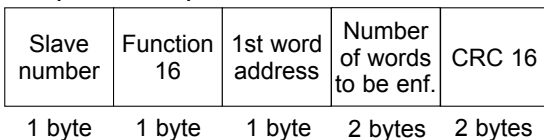


Writing of 1 word: Function N°6:


Request sequence:

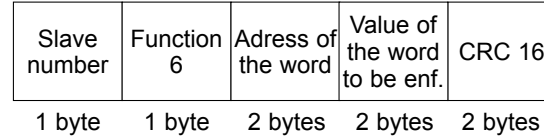

Response sequence:

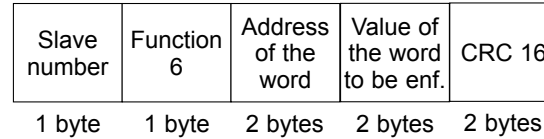

Exception sequence:

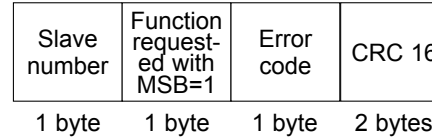


Value of the error codes:

- 1: Unknown function code
- 2: Address incorrect
- 3: Data incorrect
- 9: Writing impossible


9.4 Reading:

Example: Reading of the displayed measure


Request:

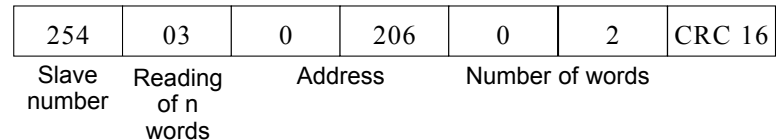

• Response with a positive measure:





Value of the measure:

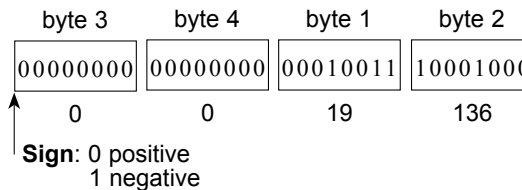


$$\begin{aligned} \text{Measure} &= \text{byte 3} \times 256^3 + \text{byte 4} \times 256^2 + \text{byte 1} \times 256 + \text{byte 2} \\ &= 0 \times 256^3 + 0 \times 256^2 + 19 \times 256 + 136 \\ &= 5000 \end{aligned}$$

Reading of the address 120 => decimal point = 2 => displayed measure: 50.00

• Response with a negative measure:

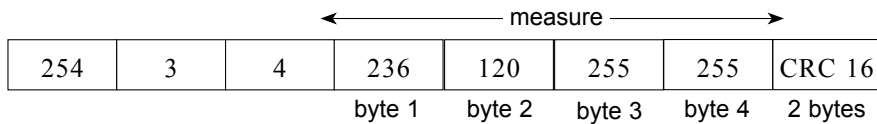


√ **Sign:** 1 negative: reversing of the bits and plus 1.

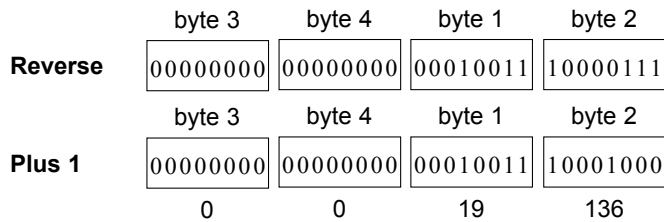

$$\begin{aligned} \text{Measure} &= -(\text{byte 3} \times 256^3 + \text{byte 4} \times 256^2 + \text{byte 1} \times 256 + \text{byte 2}) \\ &= -(0 \times 256^3 + 0 \times 256^2 + 19 \times 256 + 136) \\ &= -5000 \end{aligned}$$

Reading of the address 120 => decimal point = 2
=> displayed measure: -50.00

9.5 CRC 16 calculation algorithm:

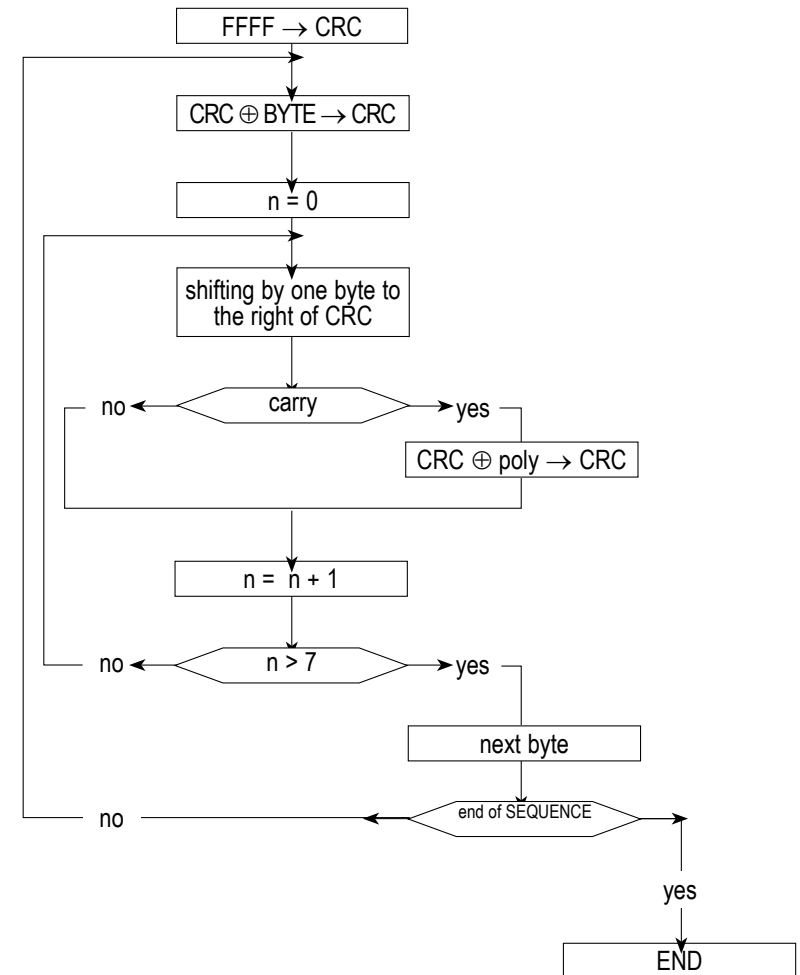

Note 1: ⊕ = exclusive or.

Note 2: POLY = A001 (hex).

Note 3: The CRC16 calculation applies to all bytes in the sequence (except CRC16).

Note 4: Caution! In the case of CRC 16, the 1st sent byte is the LSB.

Example: Sequence = 1-3-0-75-0-2 CRC16 = 180-29 (the values are decimal).